

Generation 4S

Product manual



Drainage course



Pull out the water outlet



Unscrew the cap



After unscrewing



Push to the center to drain



Pipe insertion




Press on adapter

Operating Instructions:

Wireless Control Operation

Automatic mode:

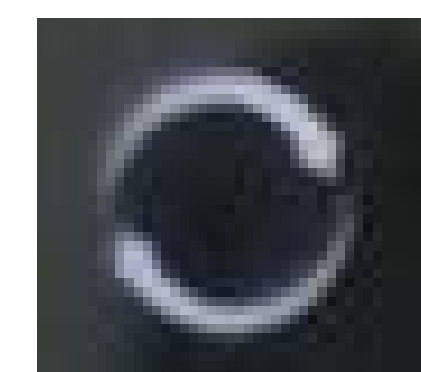


Cooling mode:



Function or mode key:



Timing key:

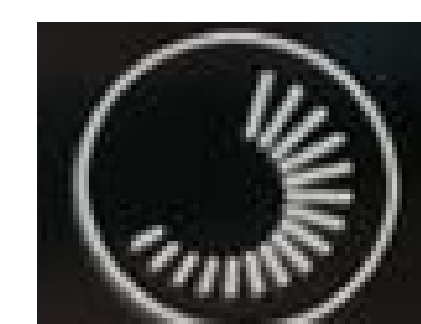

“+”key:




“-”key:



ON/OFF key:



Set temperature:

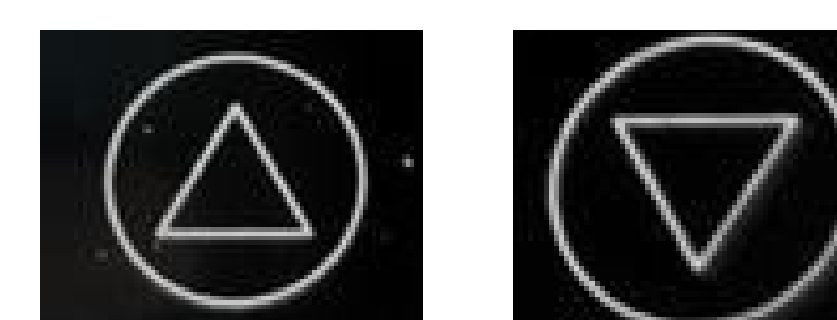

Display key pattern



User Parameter Query and Settings

1. Accessing User Parameters

- Under the main interface, press and hold the "Function" key for 3 seconds to enter the user parameter query interface.
- Use the "+" or "-" key to navigate through various parameters.

2. Setting User Parameters

In the user parameter query interface, select a parameter and press the "Function" key to enter the parameter settings mode.

The selected parameter will start flashing to indicate it is in edit mode.

Press the "+" or "-" key to adjust the parameter value.

Press the "Function" key again to confirm the change and return to the parameter query interface.

Note: In the query mode, parameters do not blink. In the settings mode, the selected parameter blinks.

3. Auto-Save and Exit

- If no key is pressed for 30 seconds during parameter query or settings, the system automatically saves the changes and exits to the main interface.
- Alternatively, press the "ON/OFF" key to exit directly to the main interface.

Real-Time Clock Settings

1. Accessing the Real-Time Clock Settings

- In the main interface, press and hold the "Timing" key for 5 seconds to enter the real-time clock settings interface.
- Both the hour and minute will appear together on the screen.

2. Adjusting the Time

In the clock settings interface:

- Press the "Timing" key to select the hour. The hour digits will flash while the minute digits remain static.
- Use the "+" or "-" key to adjust the hour.
- Press the "Timing" key again to switch to the minute setting. The minute digits will flash while the hour digits remain static.
- Use the "+" or "-" key to adjust the minutes.

3. Confirming the Settings

- Press the "Timing" key to save and return to the main interface.
- Alternatively, press the "ON/OFF" key to confirm the settings and return to the main interface.
- Note: If no key is pressed for 30 seconds, the system confirms the current settings and returns to the main interface automatically.

Timing On/Off Settings

1. Accessing the Timing Settings

- In the main interface, press the "Timing" key to enter the timing settings interface.
- The display will show "Timing Group 1" blinking.

2. Setting Timing Group 1

- When "Timing Group 1" blinks:
- Press the "Timing" key to set the start hour. The hour digits will blink. Adjust using the "+" or "-" key.
- Press the "Timing" key again to set the start minute. The minute digits will blink. Adjust using the "+" or "-" key.
- Press the "Timing" key to set the end hour. Adjust using the same method.
- Finally, press the "Timing" key again to set the end minute and save the settings.

3. Setting Additional Timing Groups

- After setting Group 1, press the "+" or "-" key to navigate to "Timing Group 2" and repeat the above steps.

4. Important Notes

- If the start time and end time of a timing group are identical, the timing for that group will be invalid.
- To confirm the timing settings, hold the "Mode" button for 3 seconds. The timing switch icon will appear.
- To deactivate a timing setting, hold the "Mode" button for 3 seconds while the timing switch icon is displayed. The icon will disappear.

5. Auto-Save and Exit

- If no key is pressed for 30 seconds, the system automatically confirms the current timing settings and returns to the main interface.
- Alternatively, press the "ON/OFF" key to confirm and return directly to the main interface.

Lock and Unlock Keypad

1. Auto-Lock Feature

- If no key is pressed for 60 seconds, the controller will enter sleep mode and lock the keypad. The "Lock Key" icon will appear on the screen.

2. Unlocking the Keypad

- To unlock, press any key to wake the screen. Then press and hold the "Switch" key for 5 seconds until the buzzer sounds.
- The "Lock Key" icon will disappear, and the keypad will be unlocked.

The use of wood wax oil




Shake properly before opening the can, dip a small amount of wood wax oil in the wood dealer, apply thinly, and wait for dry

Waterproof



Scratch proof

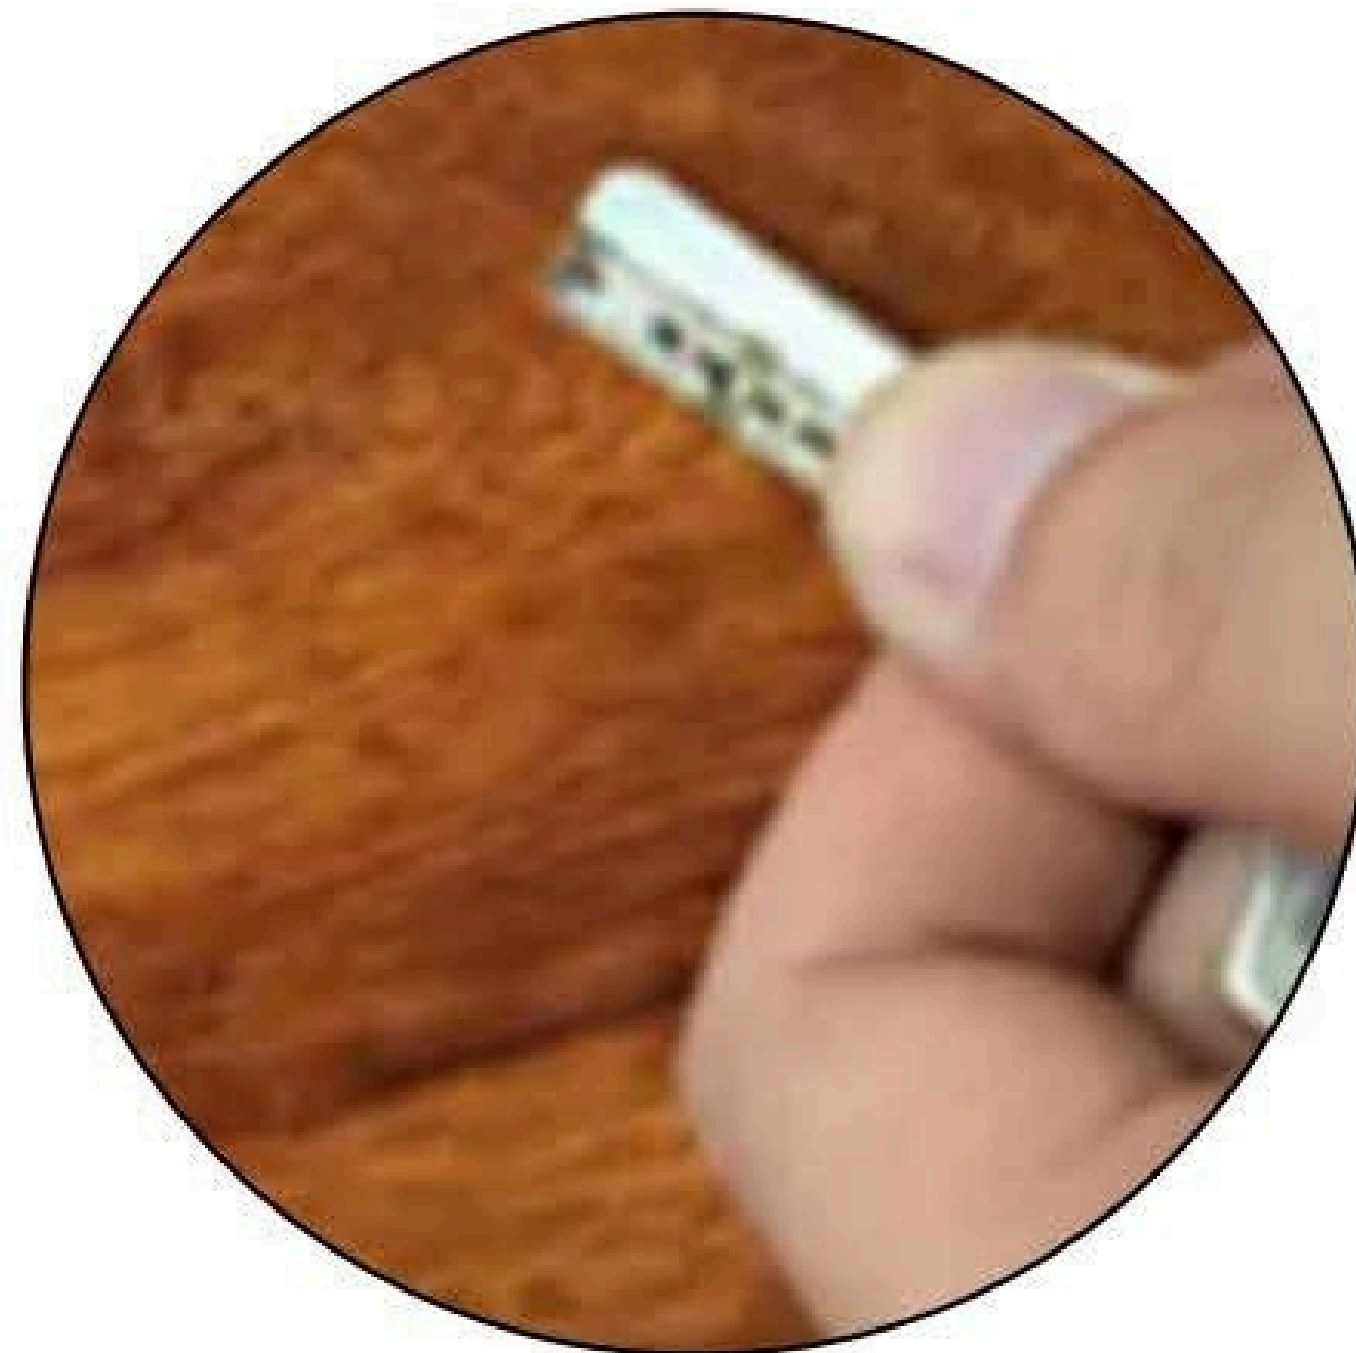

Antifouling




304 stainless steel liner precautions





Do not clean with hard objects

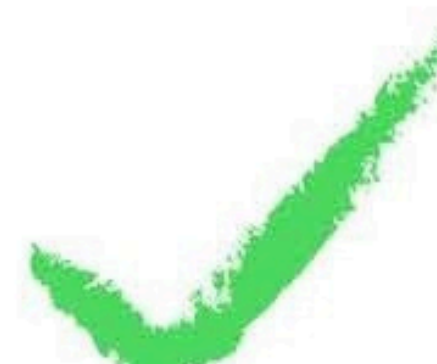

It should be wiped with a soft wool cloth



Do not use any cleaning agent or it may cause oxidation of stainless steel



Decontamination, brightness, rust prevention


Filter disassembly process



Remove the filter using
a special wrench



Loading filter paper

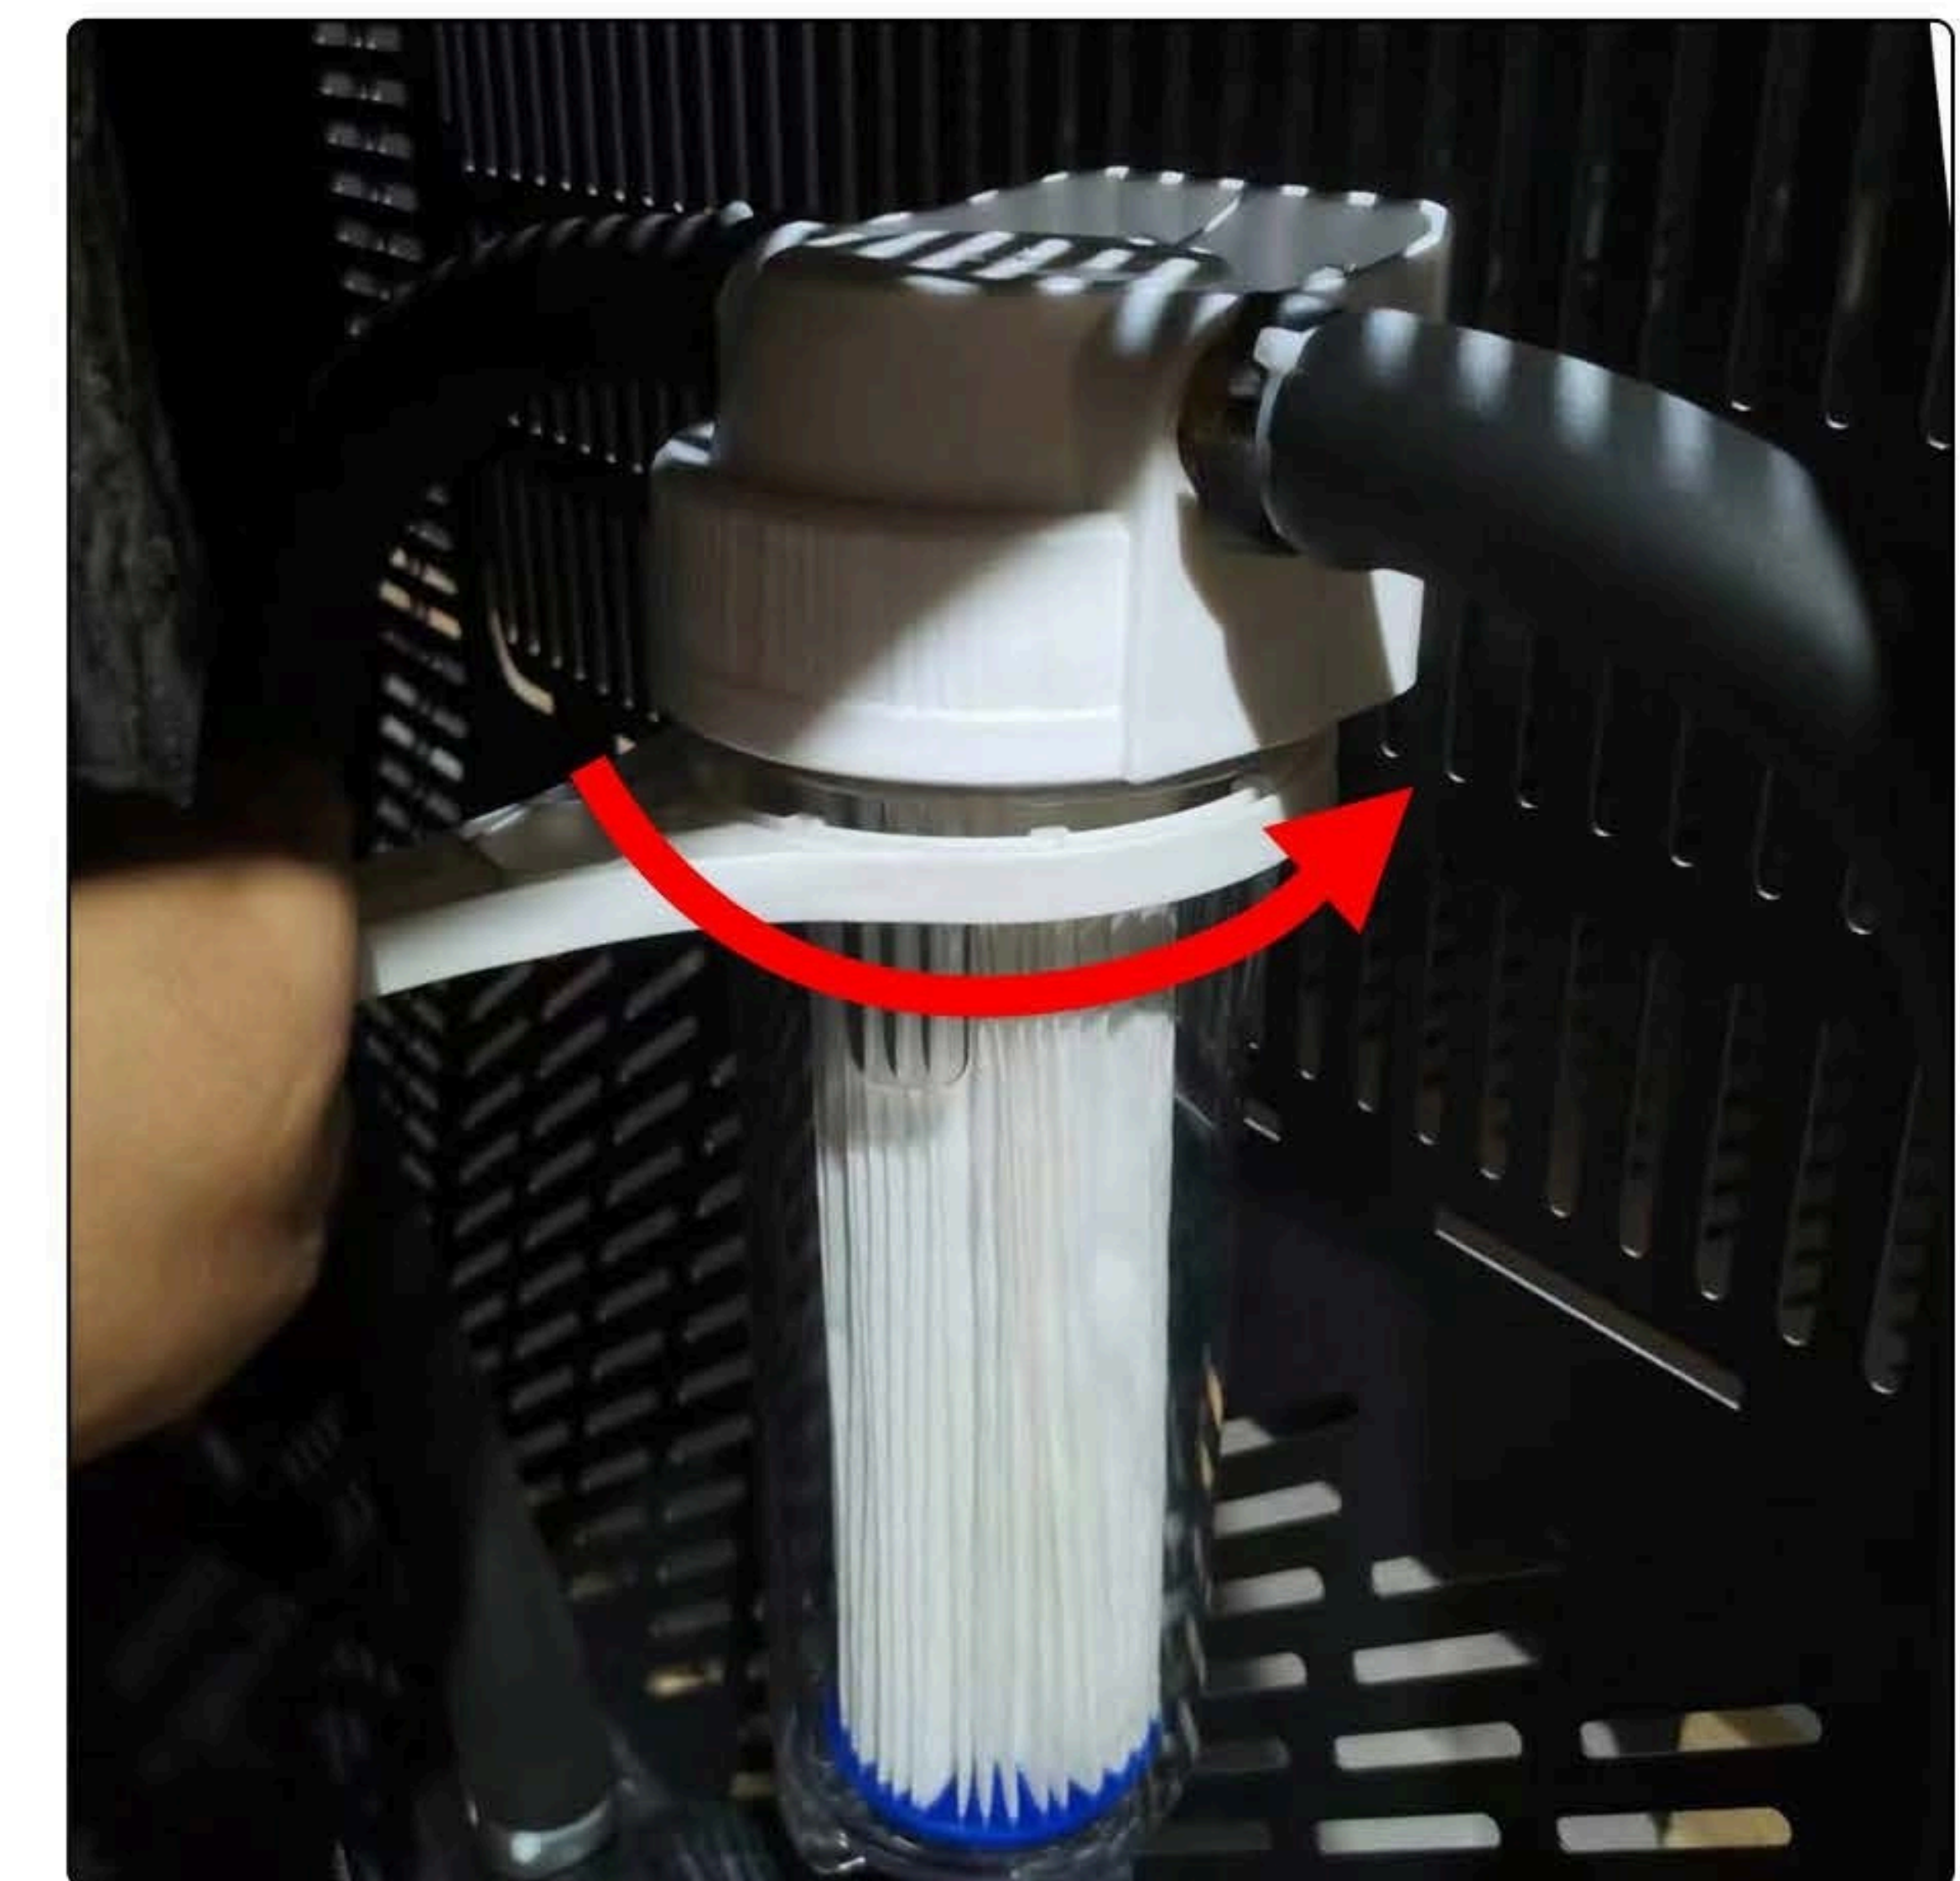


Install the filter using
a special wrench


Replace according to water quality requirements, replace once a week for frequent use, and replace once every two months for infrequent use

Q&A

If the pump does not start, check whether the filter element is filled with water

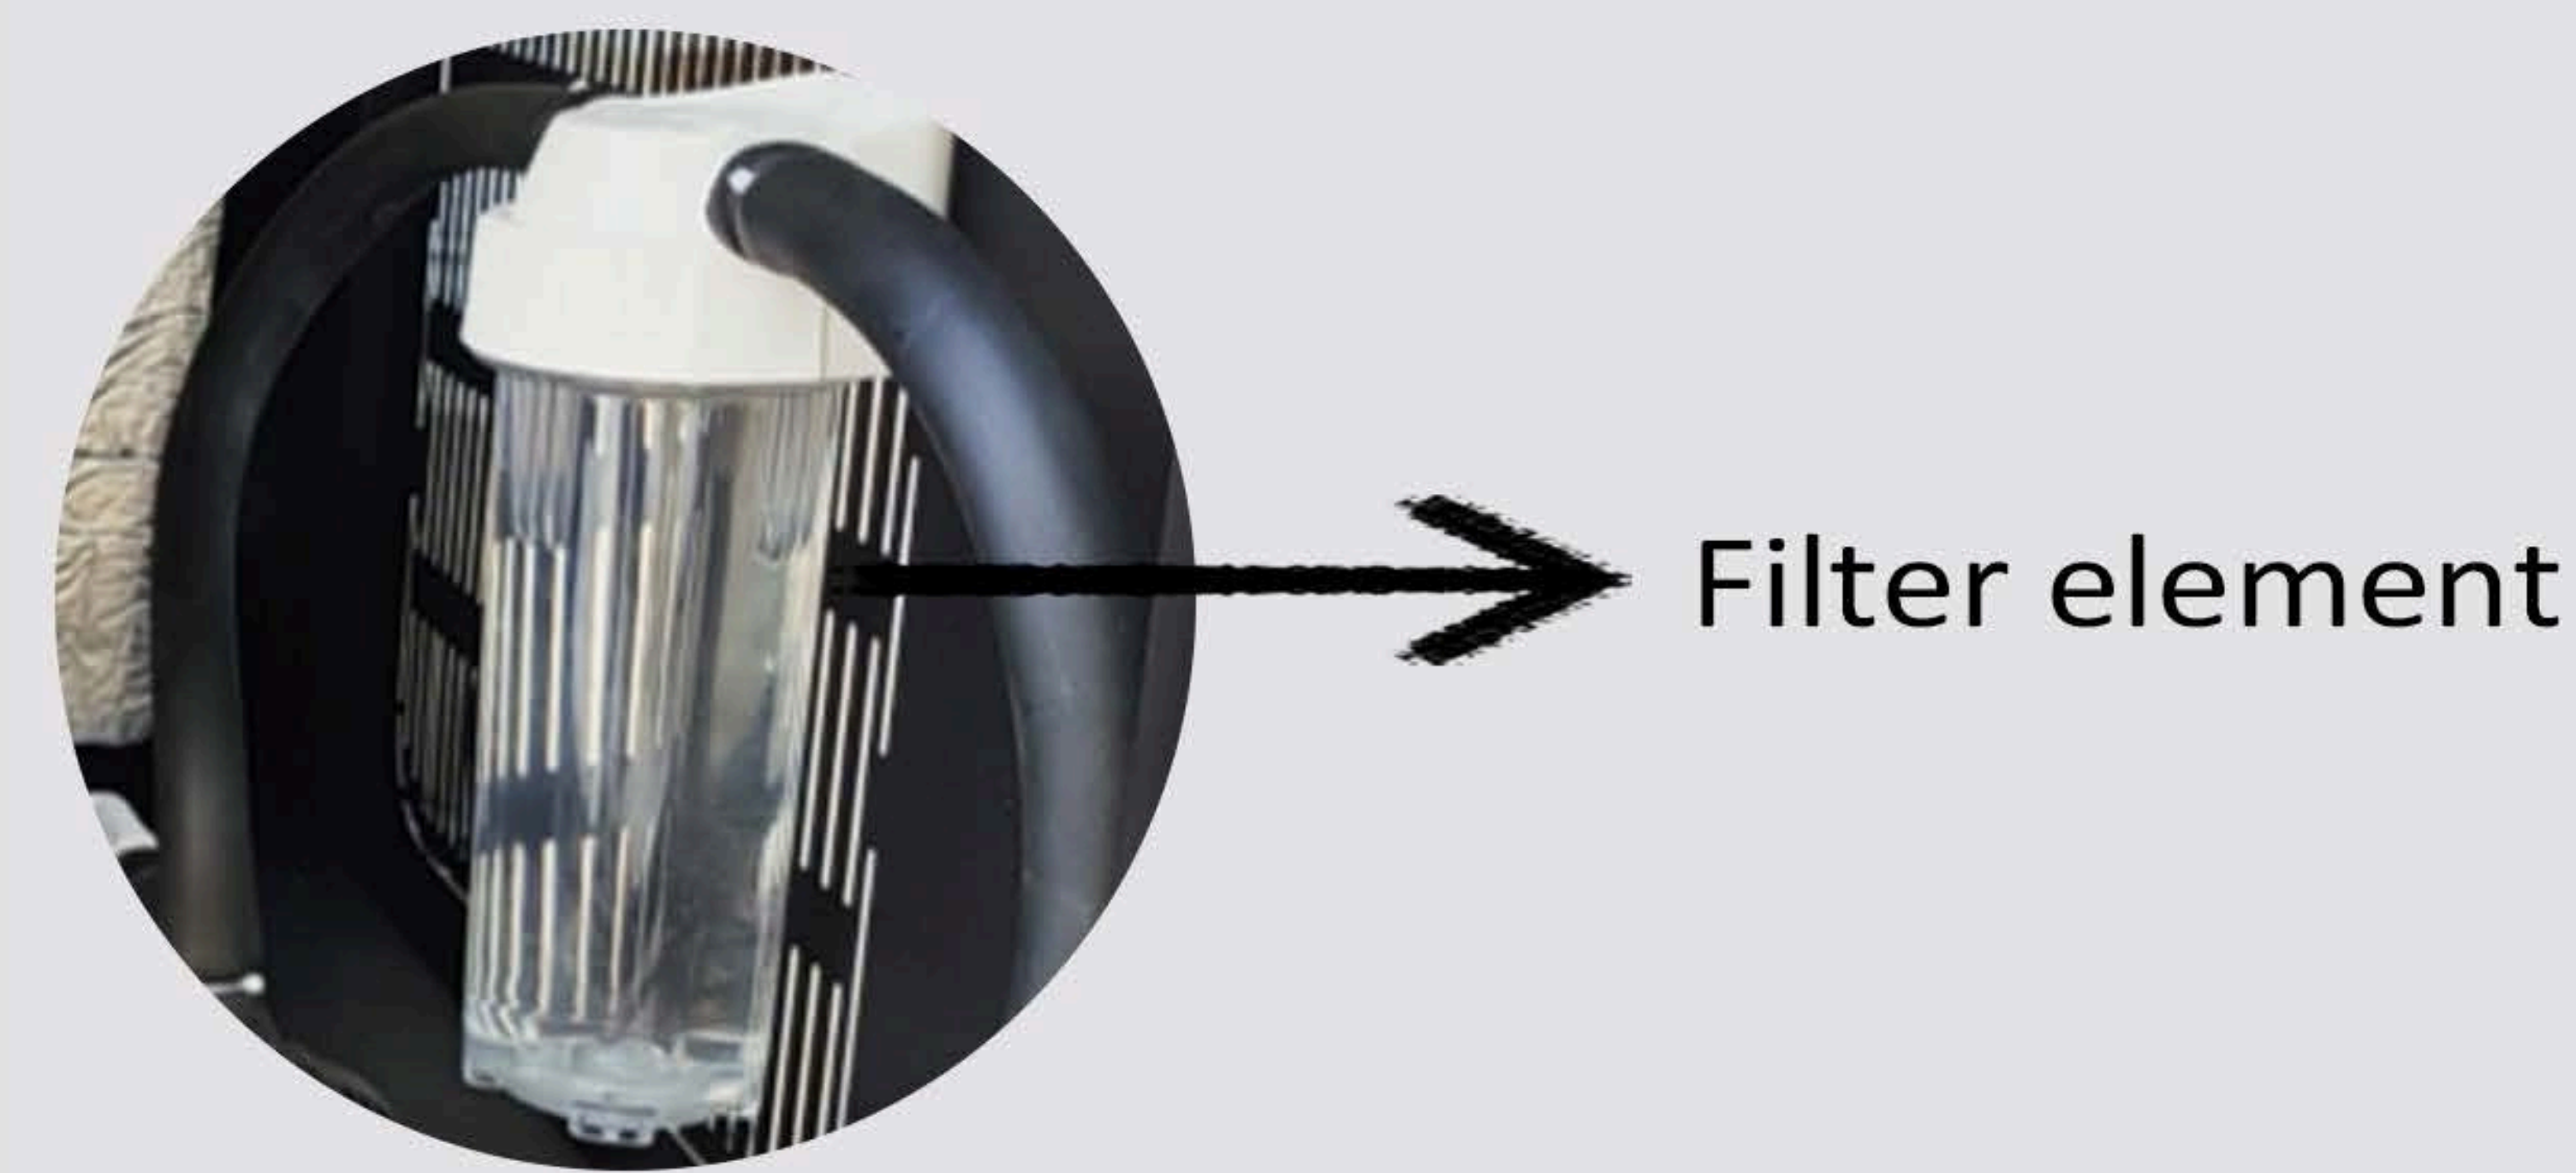


Wait for 6-7 hours if the hot air is not cooled

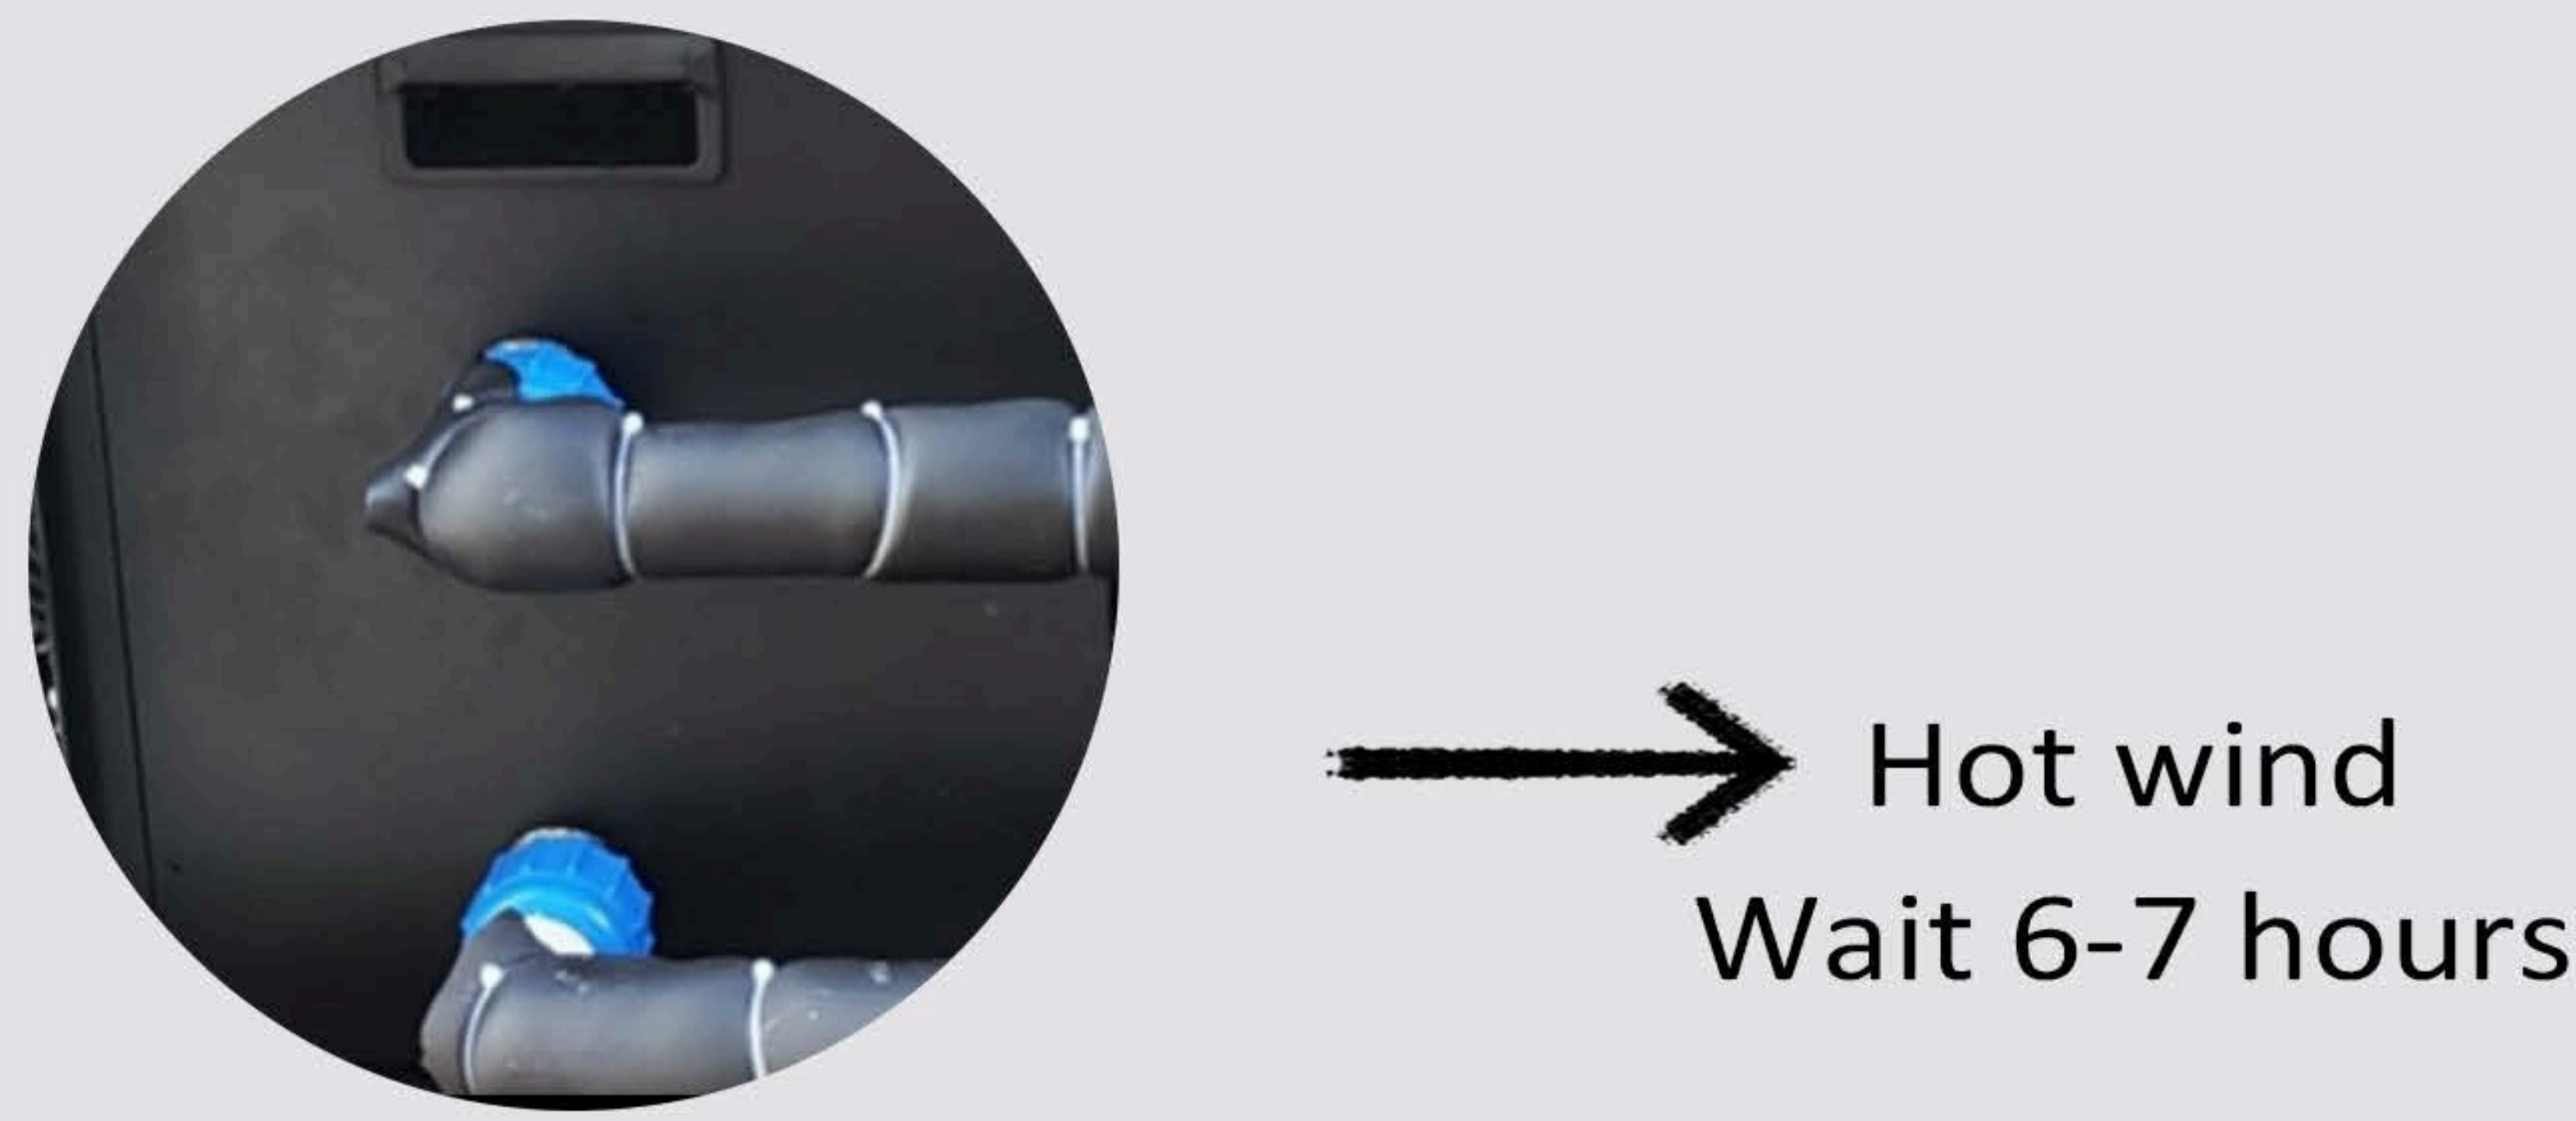


If the chiller display is dropping fast, that means that there is a problem with the water pump.



The water pump has sound and impurities. The water pump needs to be replaced

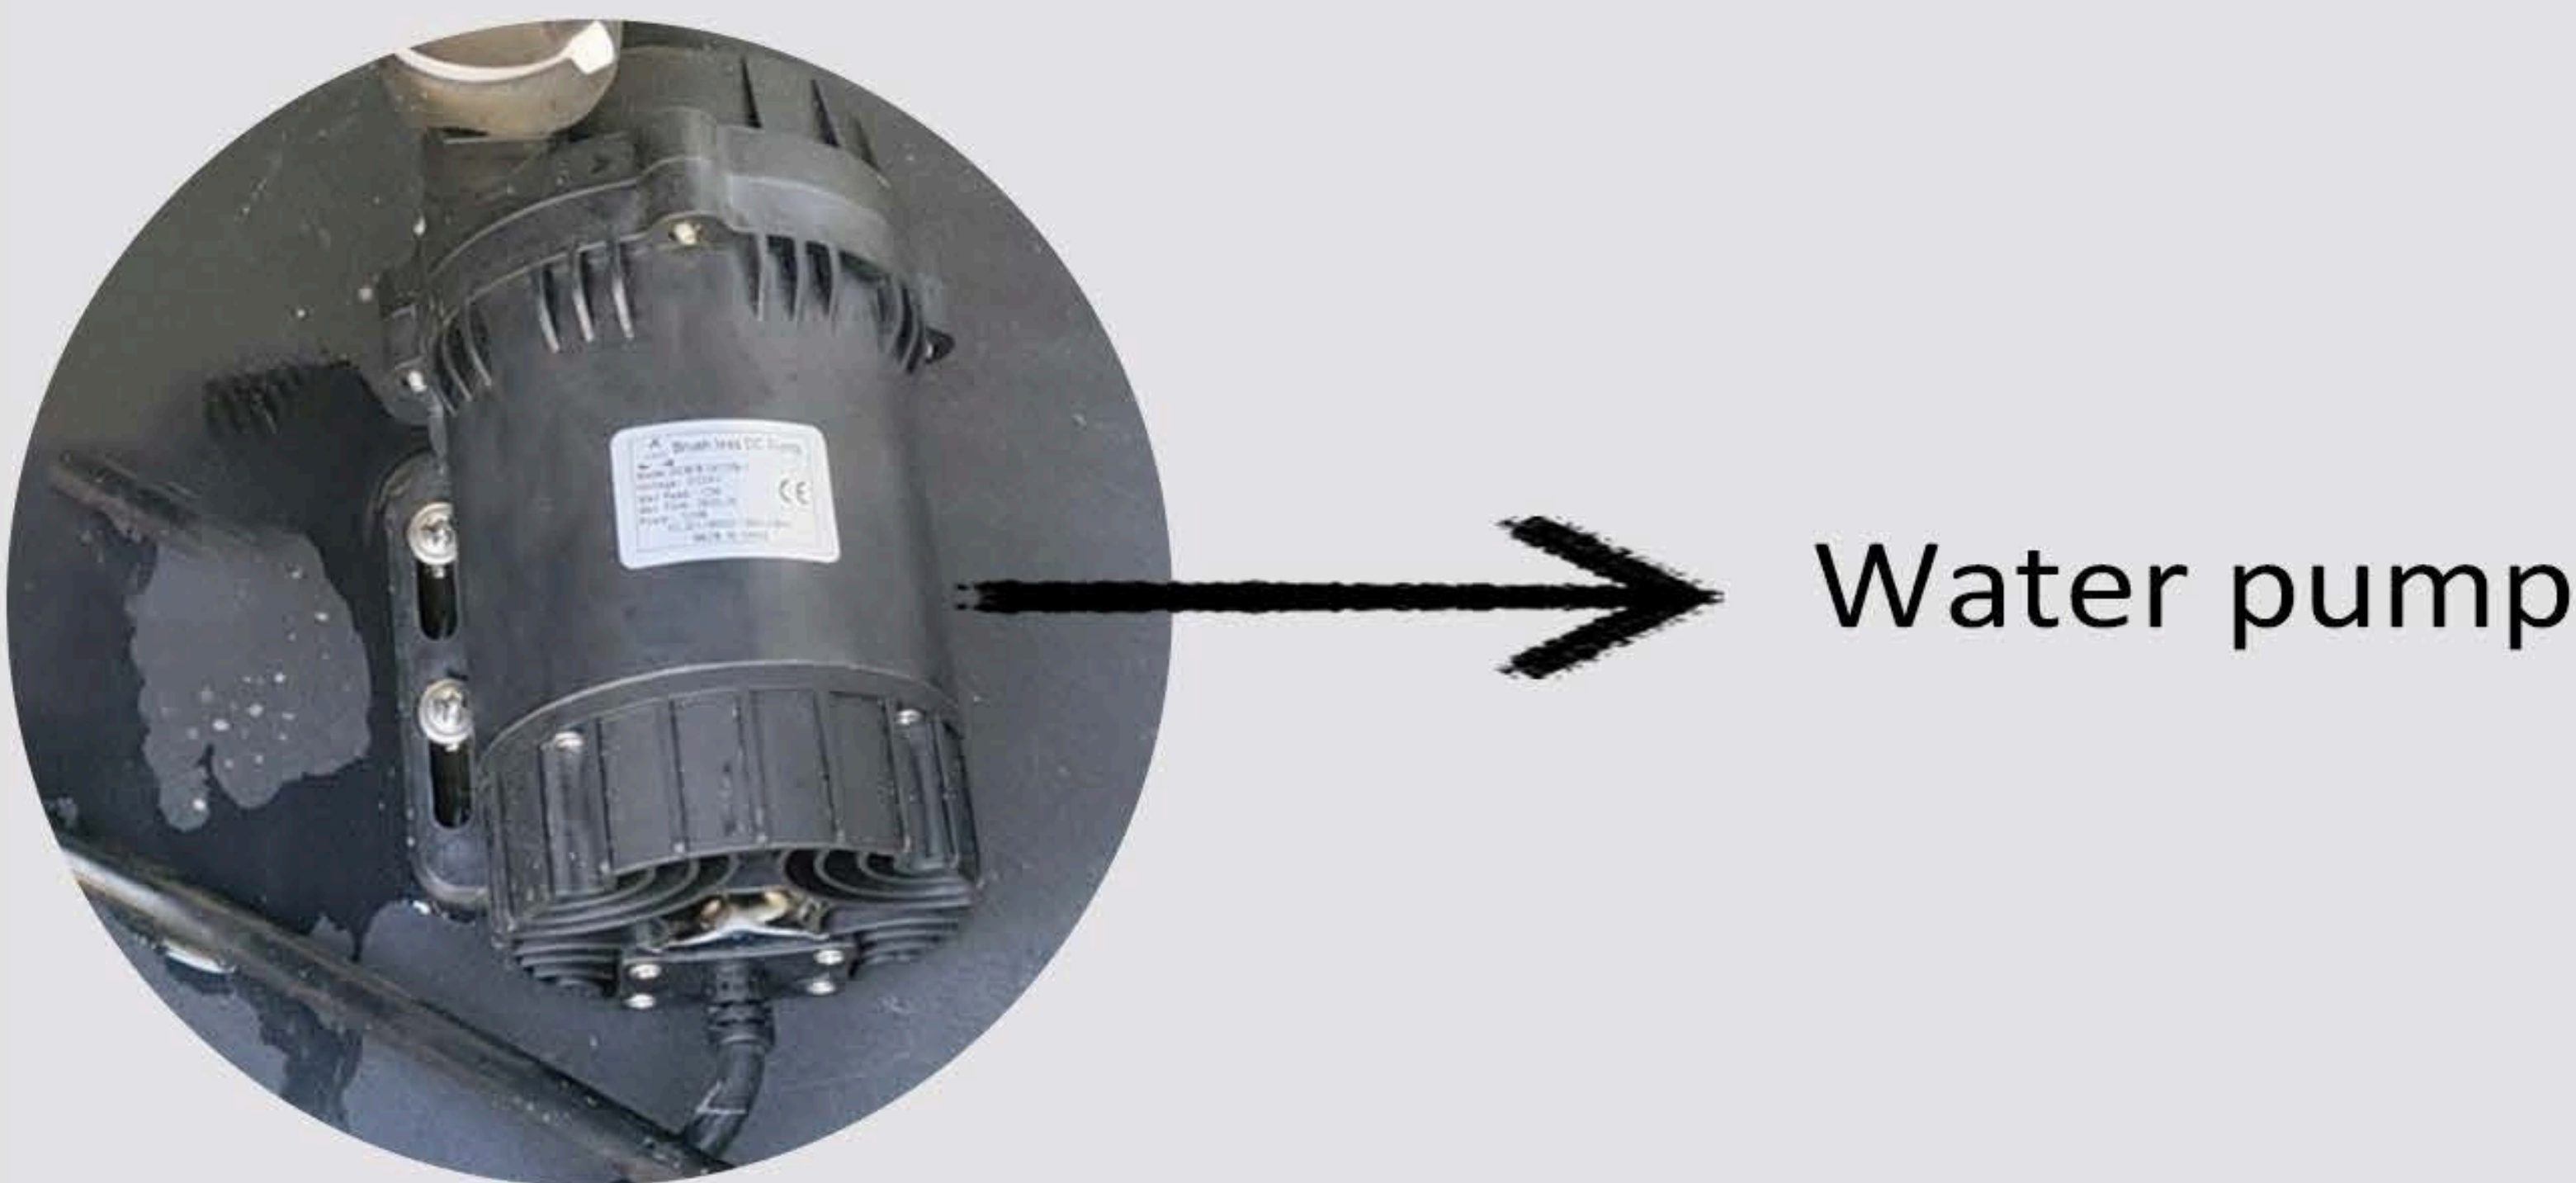

The fan's not blowing. There's a circuit problem

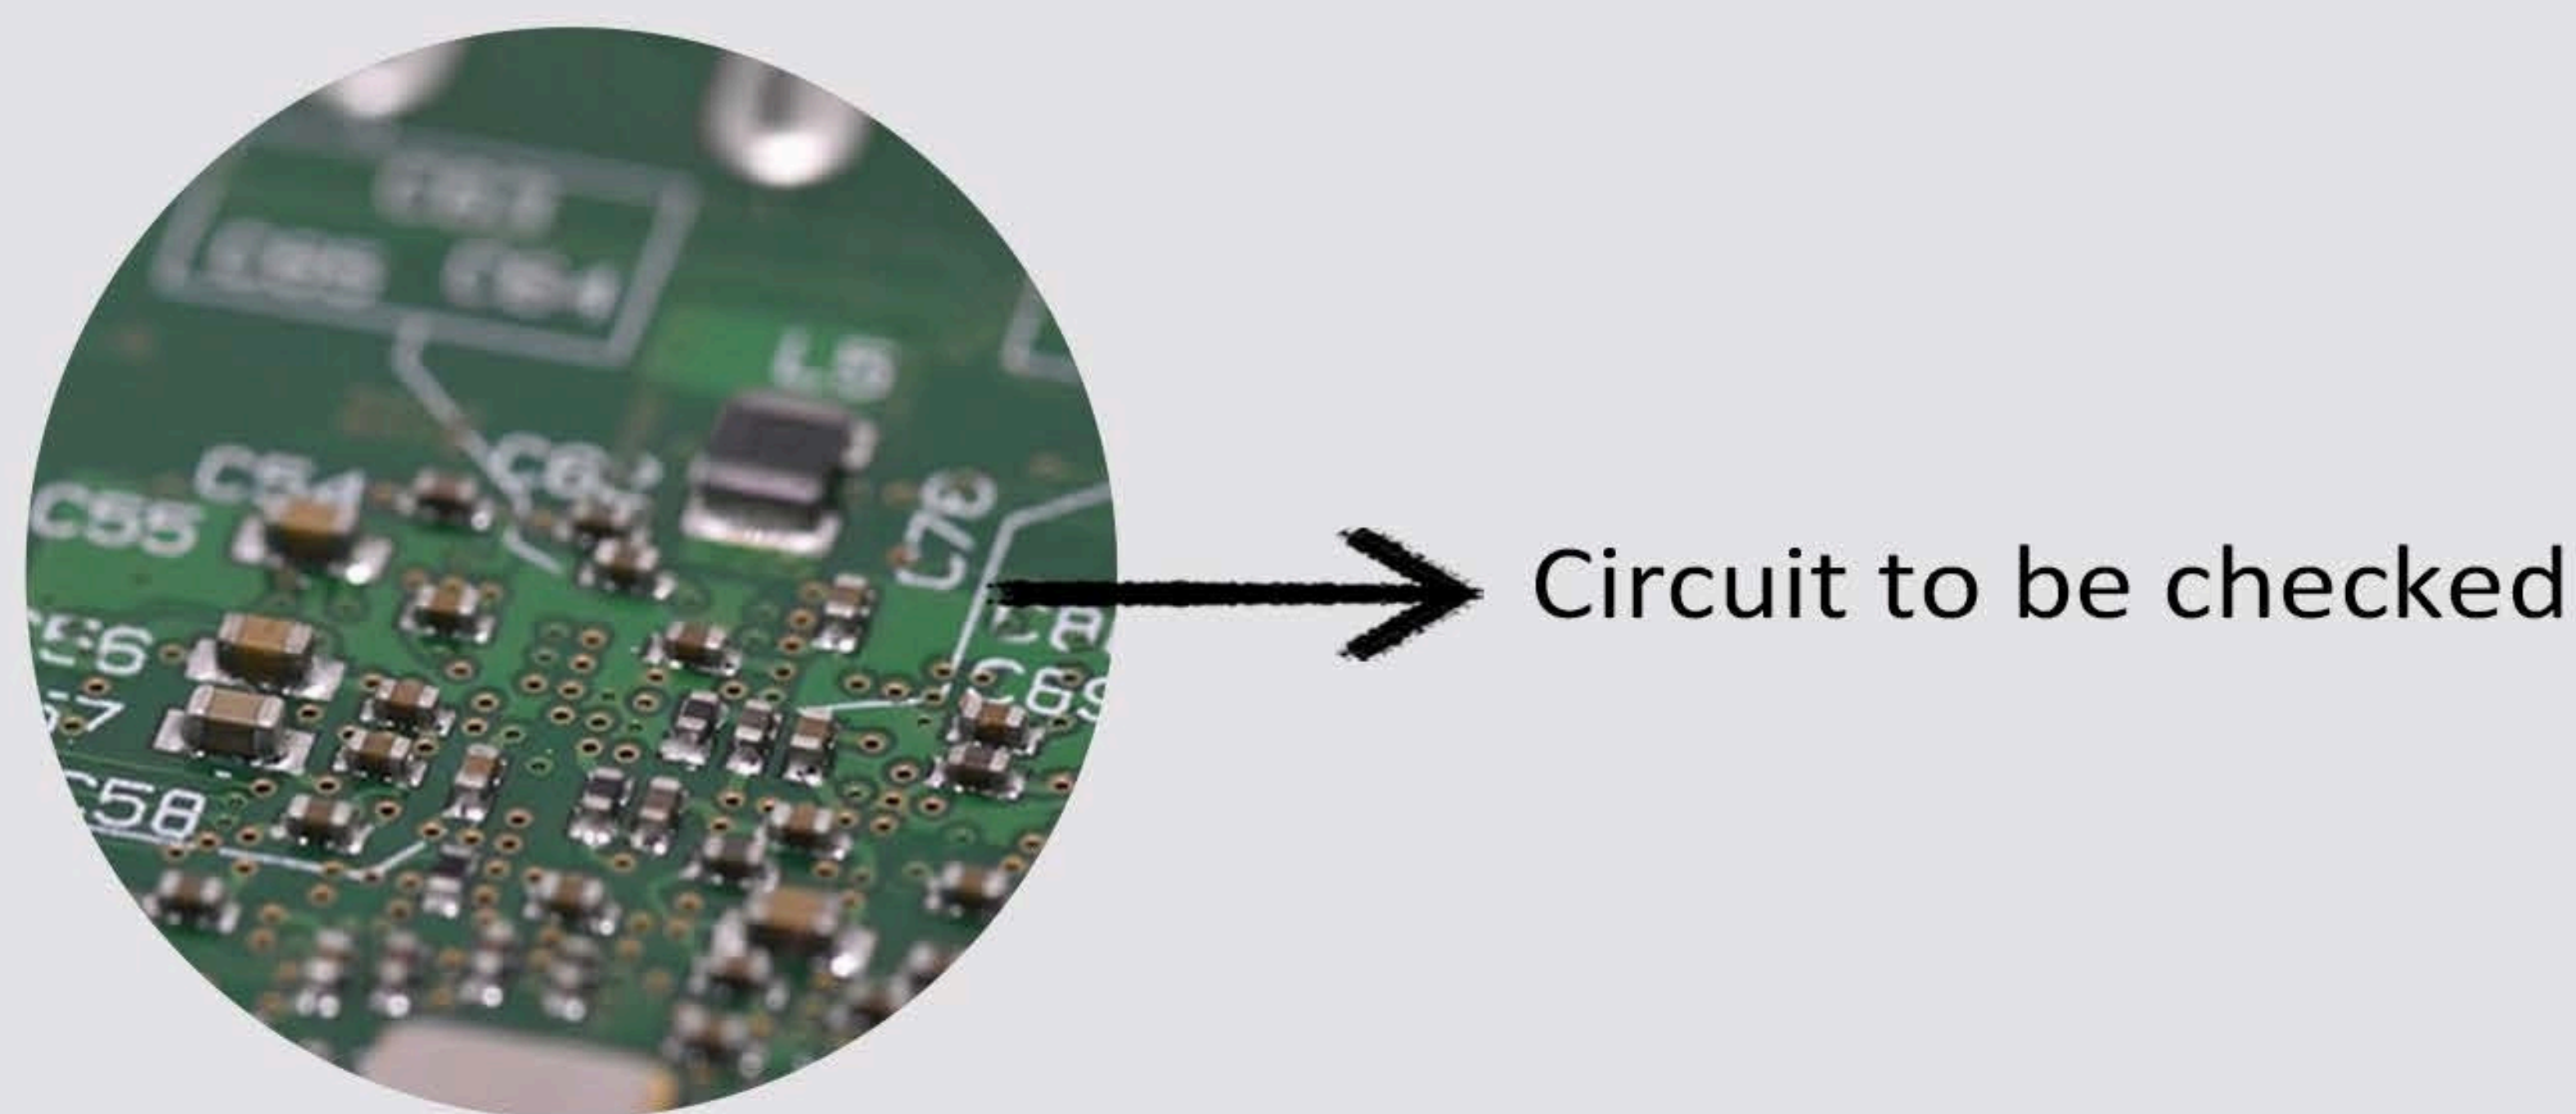

Cold air from the fan causes refrigerant leakage

