





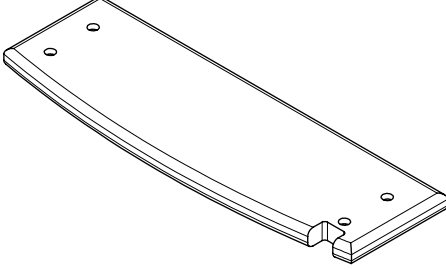
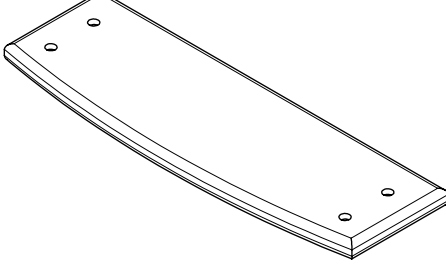


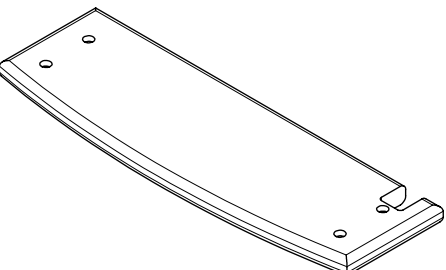
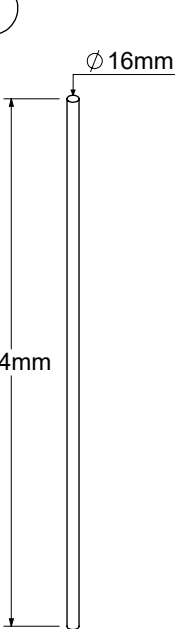
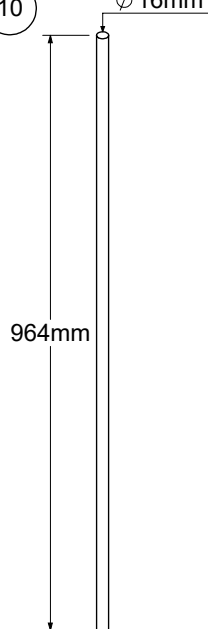






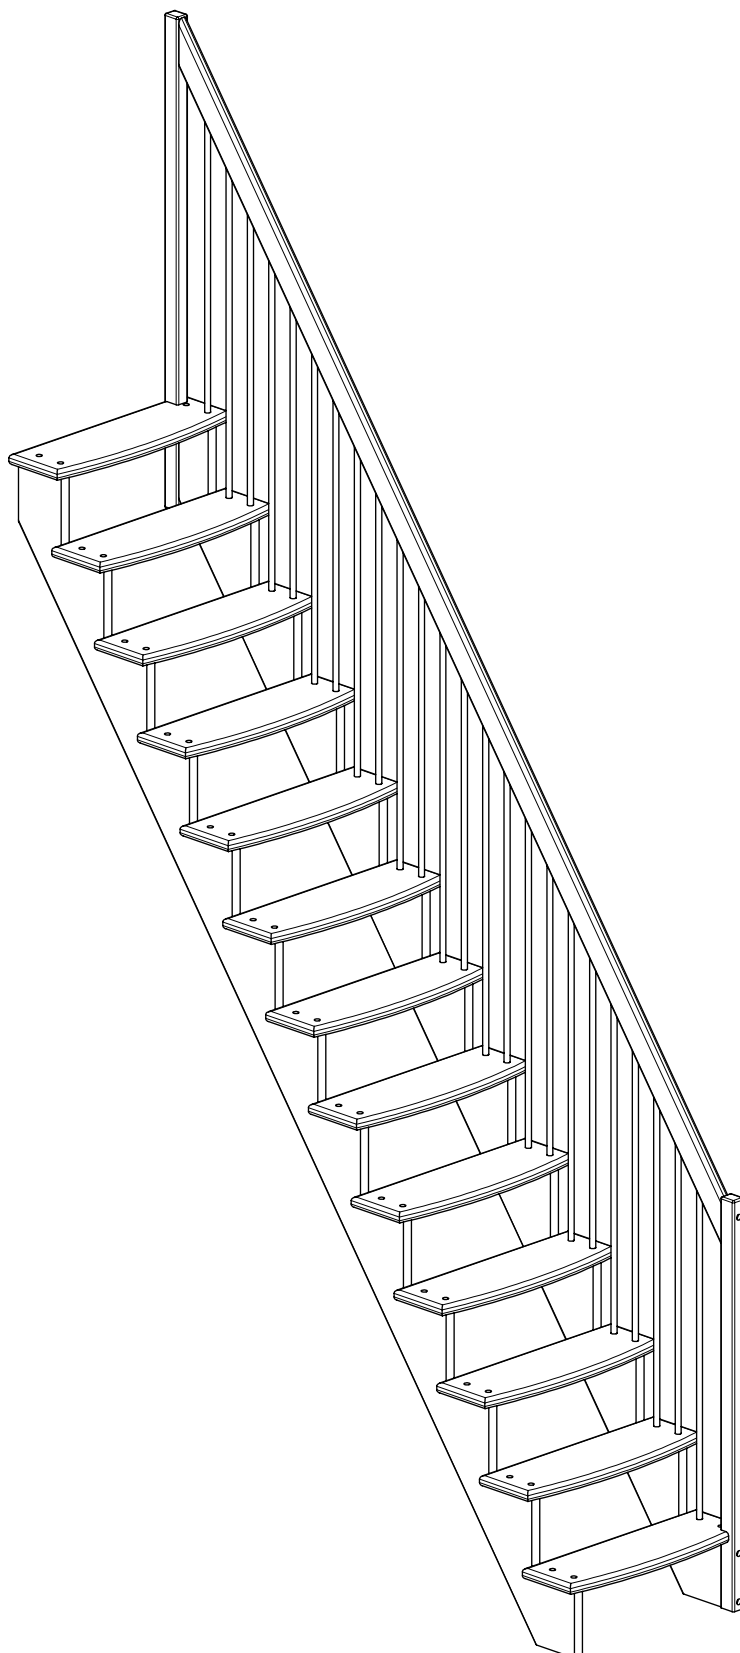










# LYON

Installation instruction  
Montageanleitung  
Instruction de montage






<p>1</p>  <p>155mm</p>					
<p>x 1</p> <p>2</p>  <p>105mm</p>					
<p>x 1</p> <p>3</p> 					
<p>x 1</p> <p>4</p> 	<p>5</p> 	<p>6</p> 	<p>7</p> 		
<p>x 1</p> <p>11</p> 	<p>x 1</p> <p>12</p> 	<p>x 1</p> <p>8</p> 	<p>x 11</p> <p>9</p>  <p>Ø 16mm</p> <p>854mm</p>	<p>x 12</p> <p>10</p>  <p>Ø 16mm</p> <p>964mm</p>	
<p>x 4</p> <p>C1-09910</p> 	<p>x 2</p> <p>R3-90050</p> 	<p>x 26</p> <p>Ø16 x 10</p> 	<p>x 4</p> <p>Ø16/Ø20</p> 	<p>x 12</p> <p>24</p>  <p>Ø5 x 25</p>	<p>x 12</p> <p>25</p>  <p>4 mm</p>
<p>x 52</p> <p>R3-72110</p> <p>Ø5 x 50</p> 	<p>x 6</p> <p>R1-63471</p> <p>Ø6,3 x 80</p> 	<p>x 4</p> <p>R3-91290</p> <p>Ø12 x 60</p> 	<p>x 4</p> <p>R3-91060</p> <p>Ø8 x 60</p> 	<p>x 8</p> <p>R3-91360</p> <p>Ø5 x 25</p> 	<p>x 1</p> <p>R3-91440</p> <p>4 mm</p> 

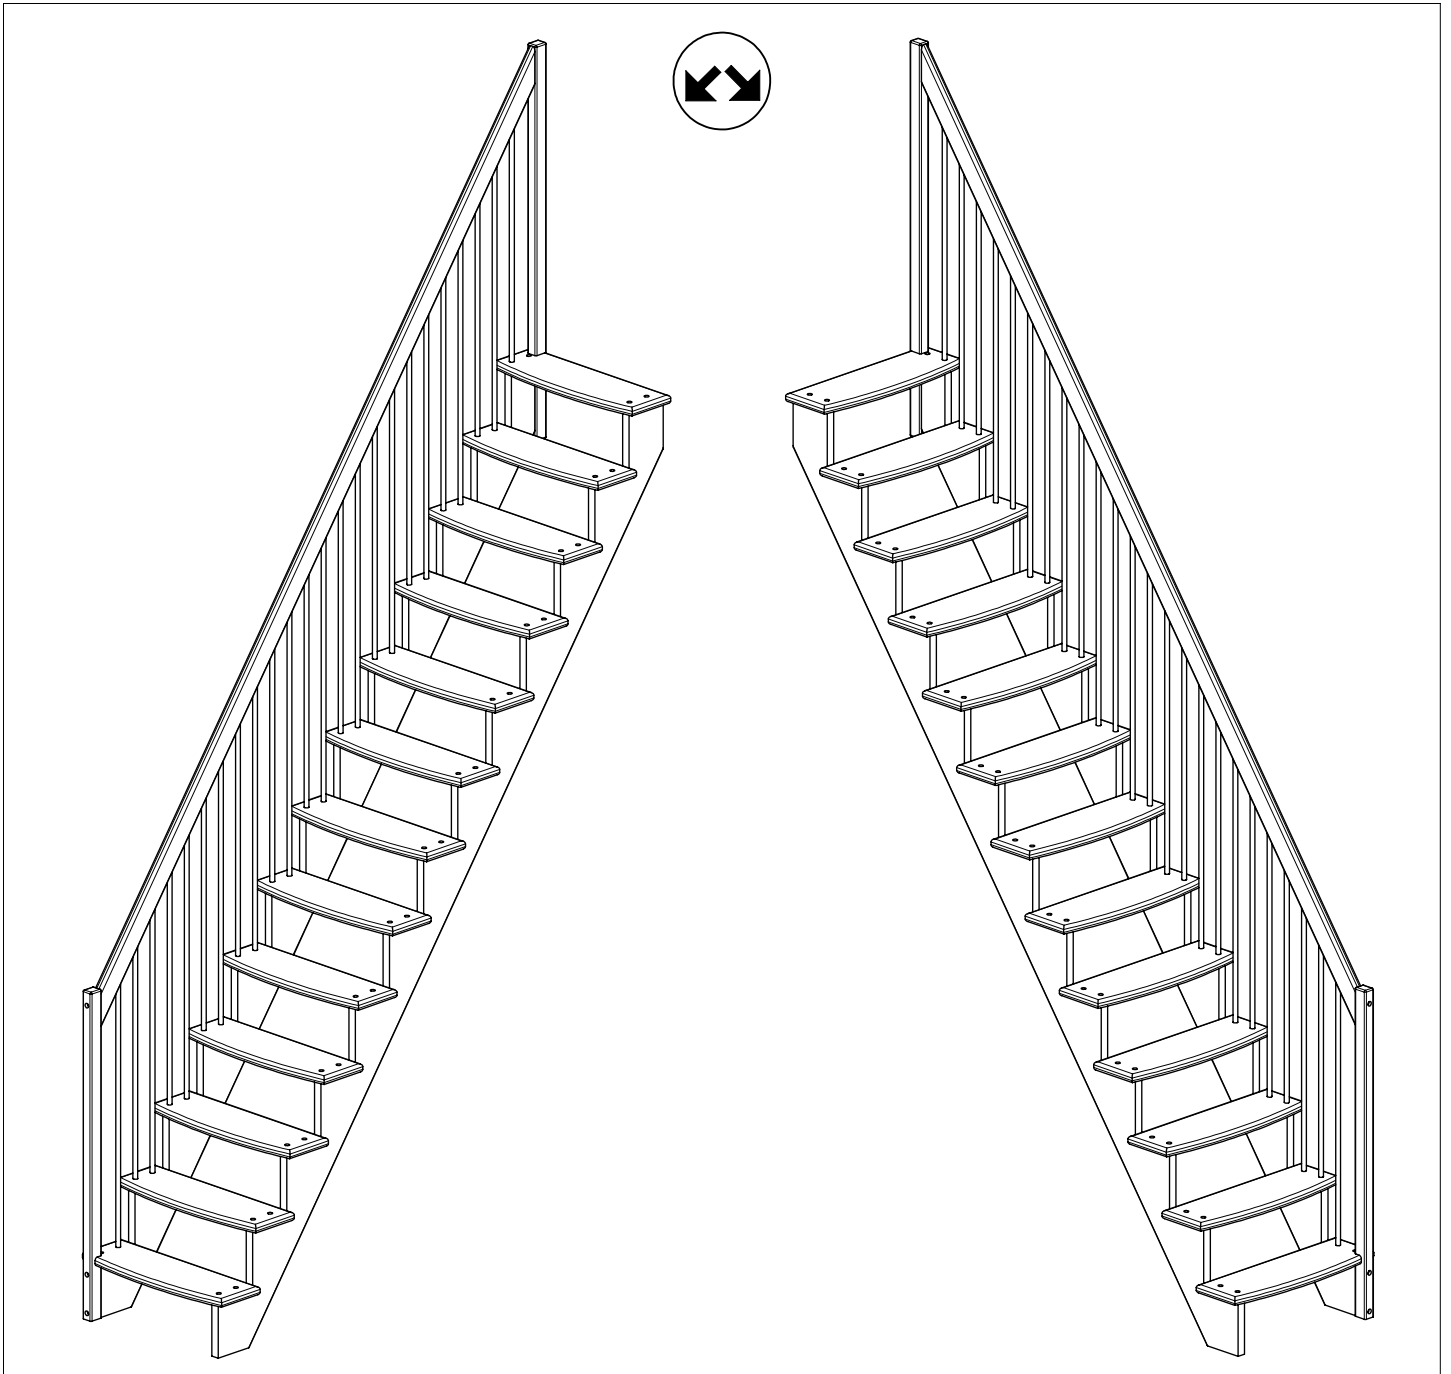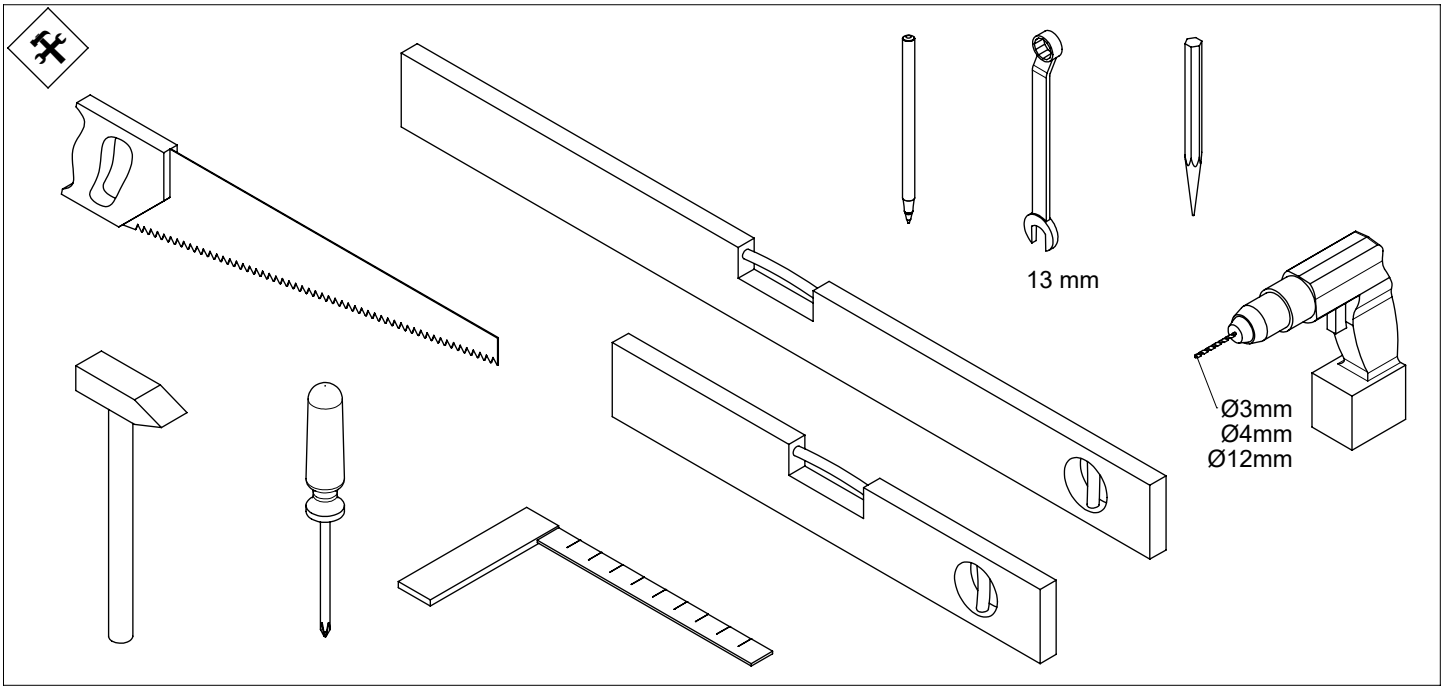

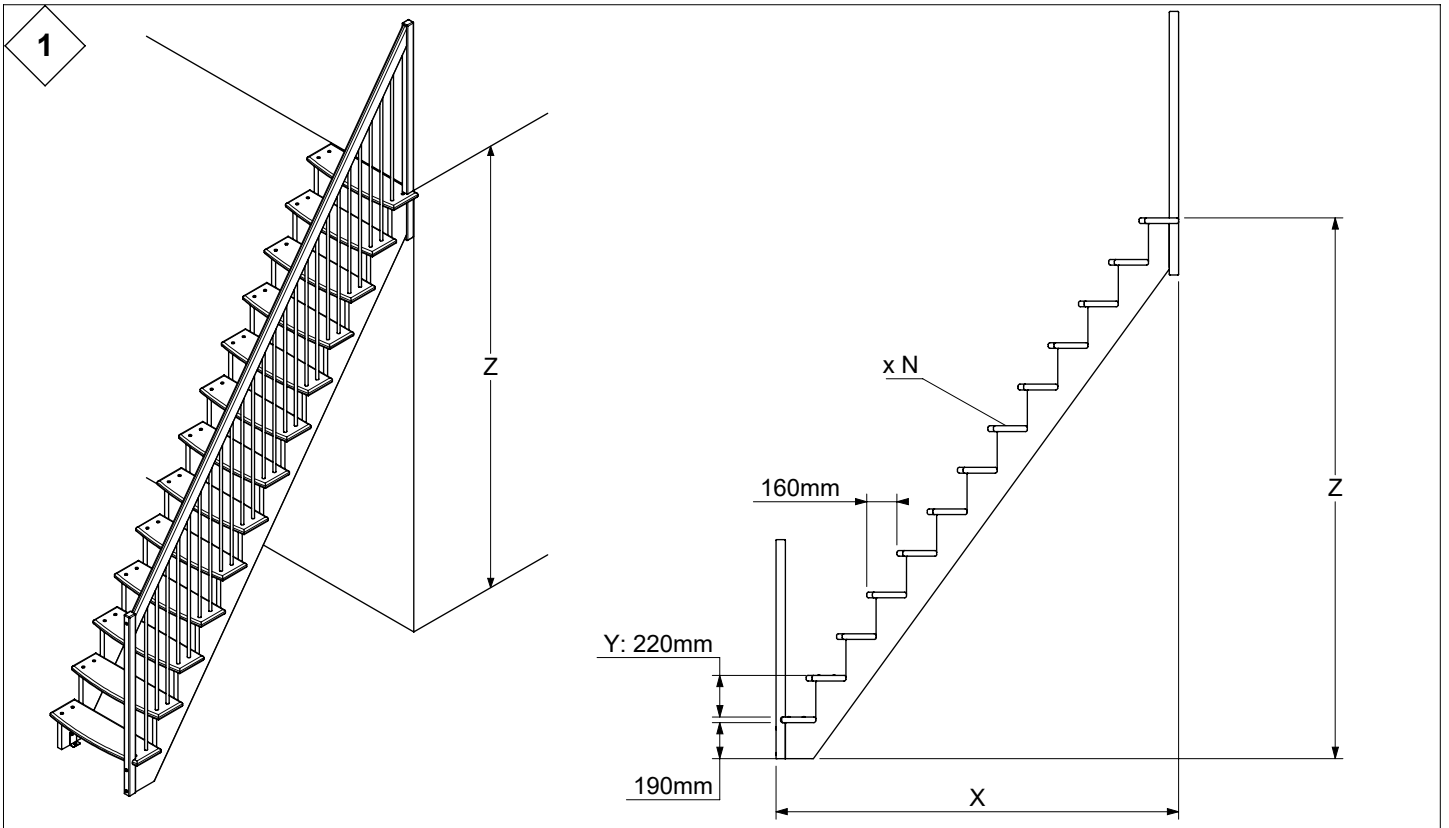

Y: 220mm			
N [st /p]	Z [mm]	X [mm]	
		B: 650mm	B: 750mm
11	2420	1810	1810
12	2640	1970	1970
13	2860	2130	2130

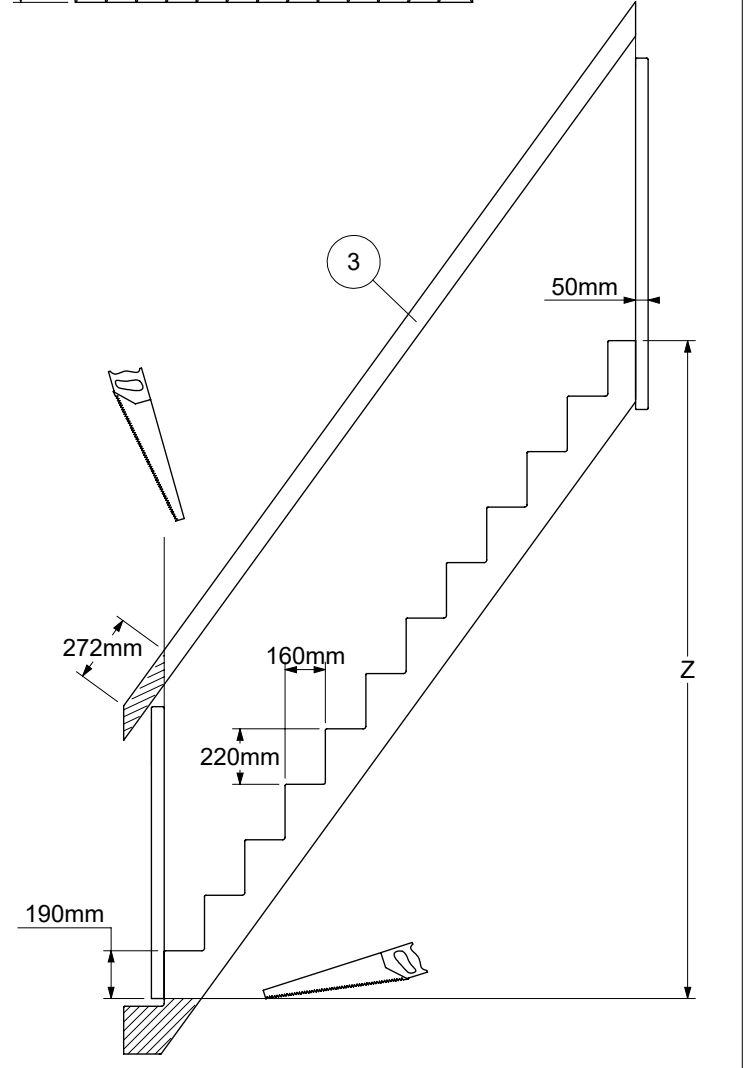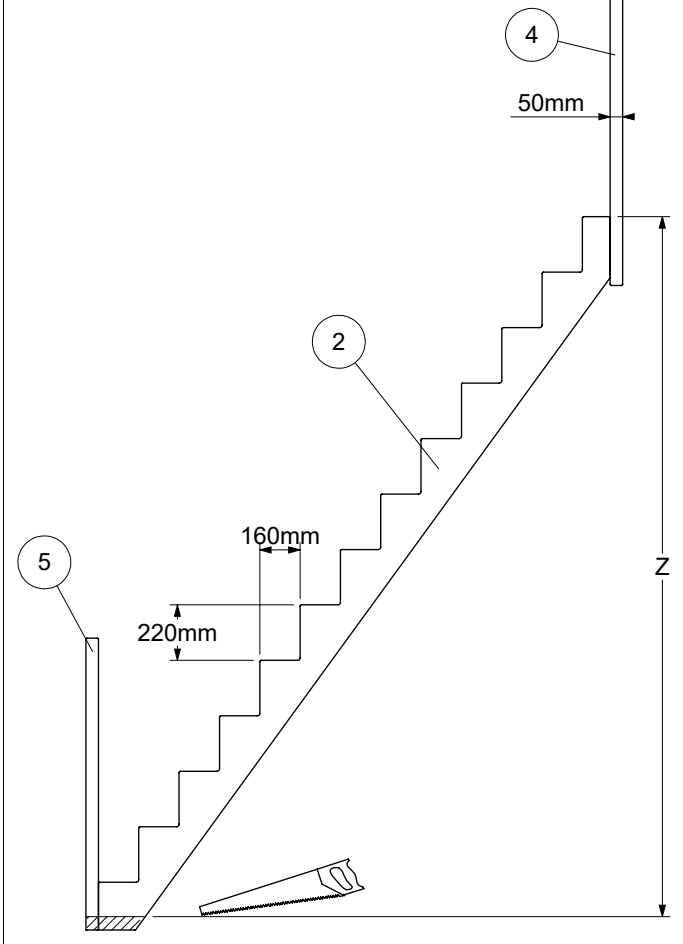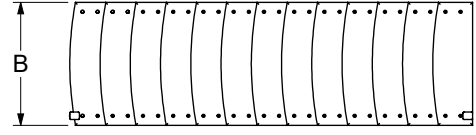

2


1122mm

4


2

1158mm


5

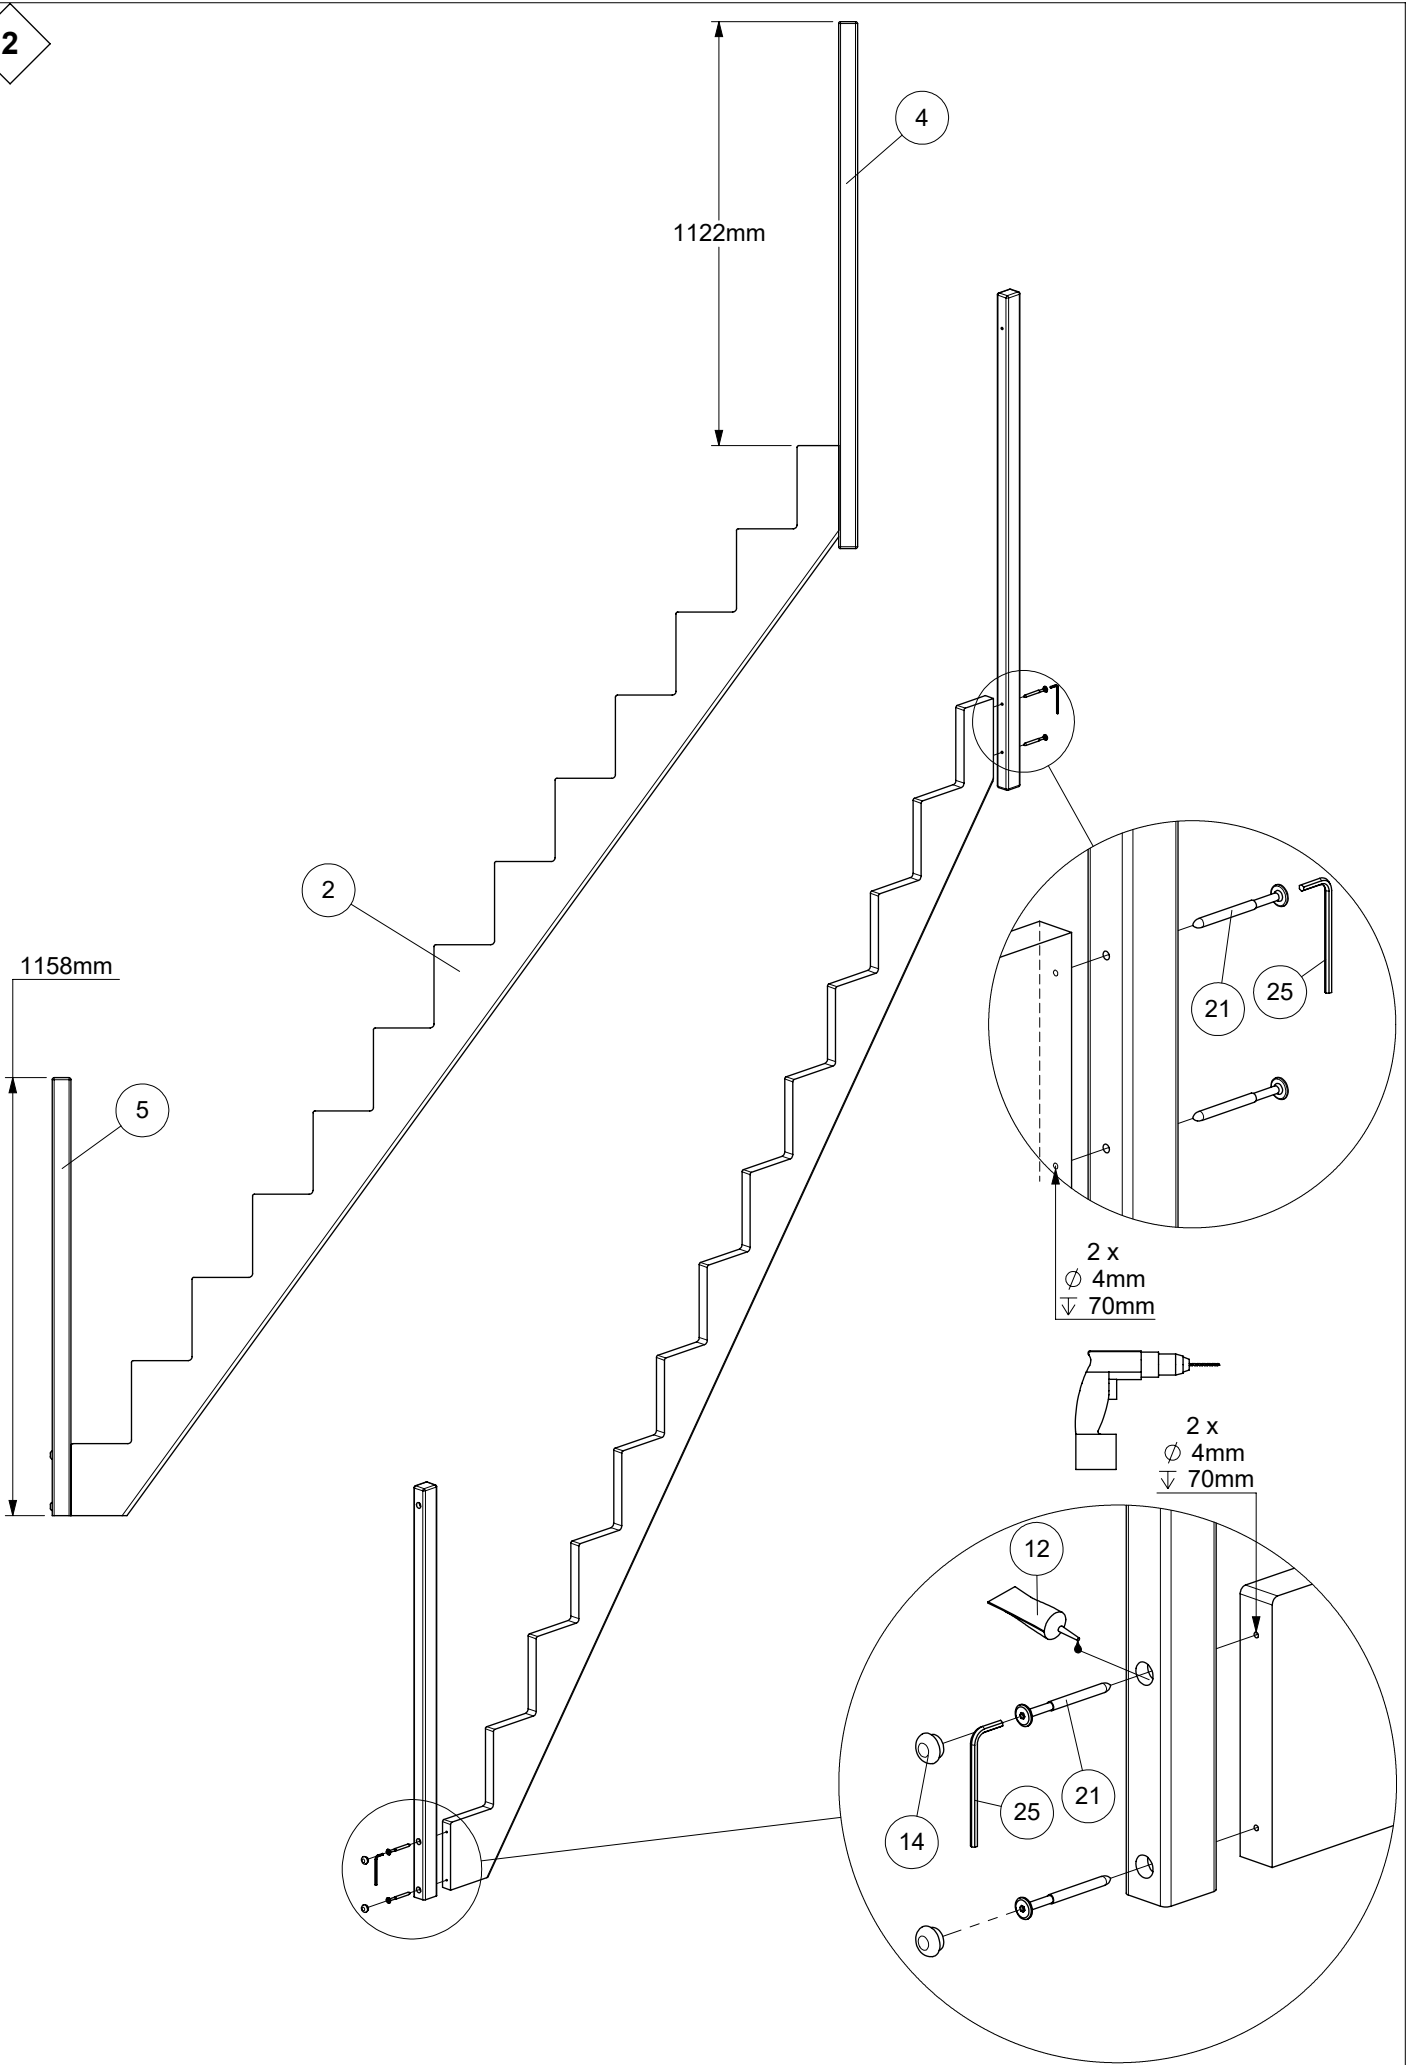


2 x  
 $\varnothing$  4mm  
 $\nabla$  70mm


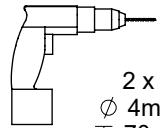


2 x  
 $\varnothing$  4mm  
 $\nabla$  70mm

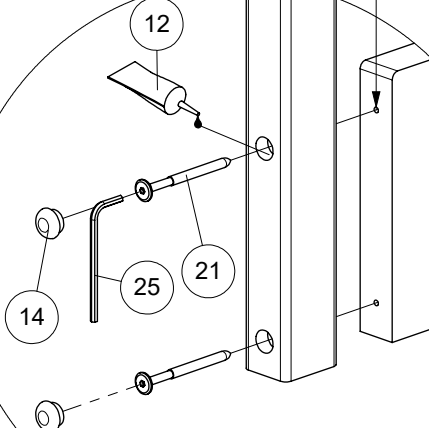


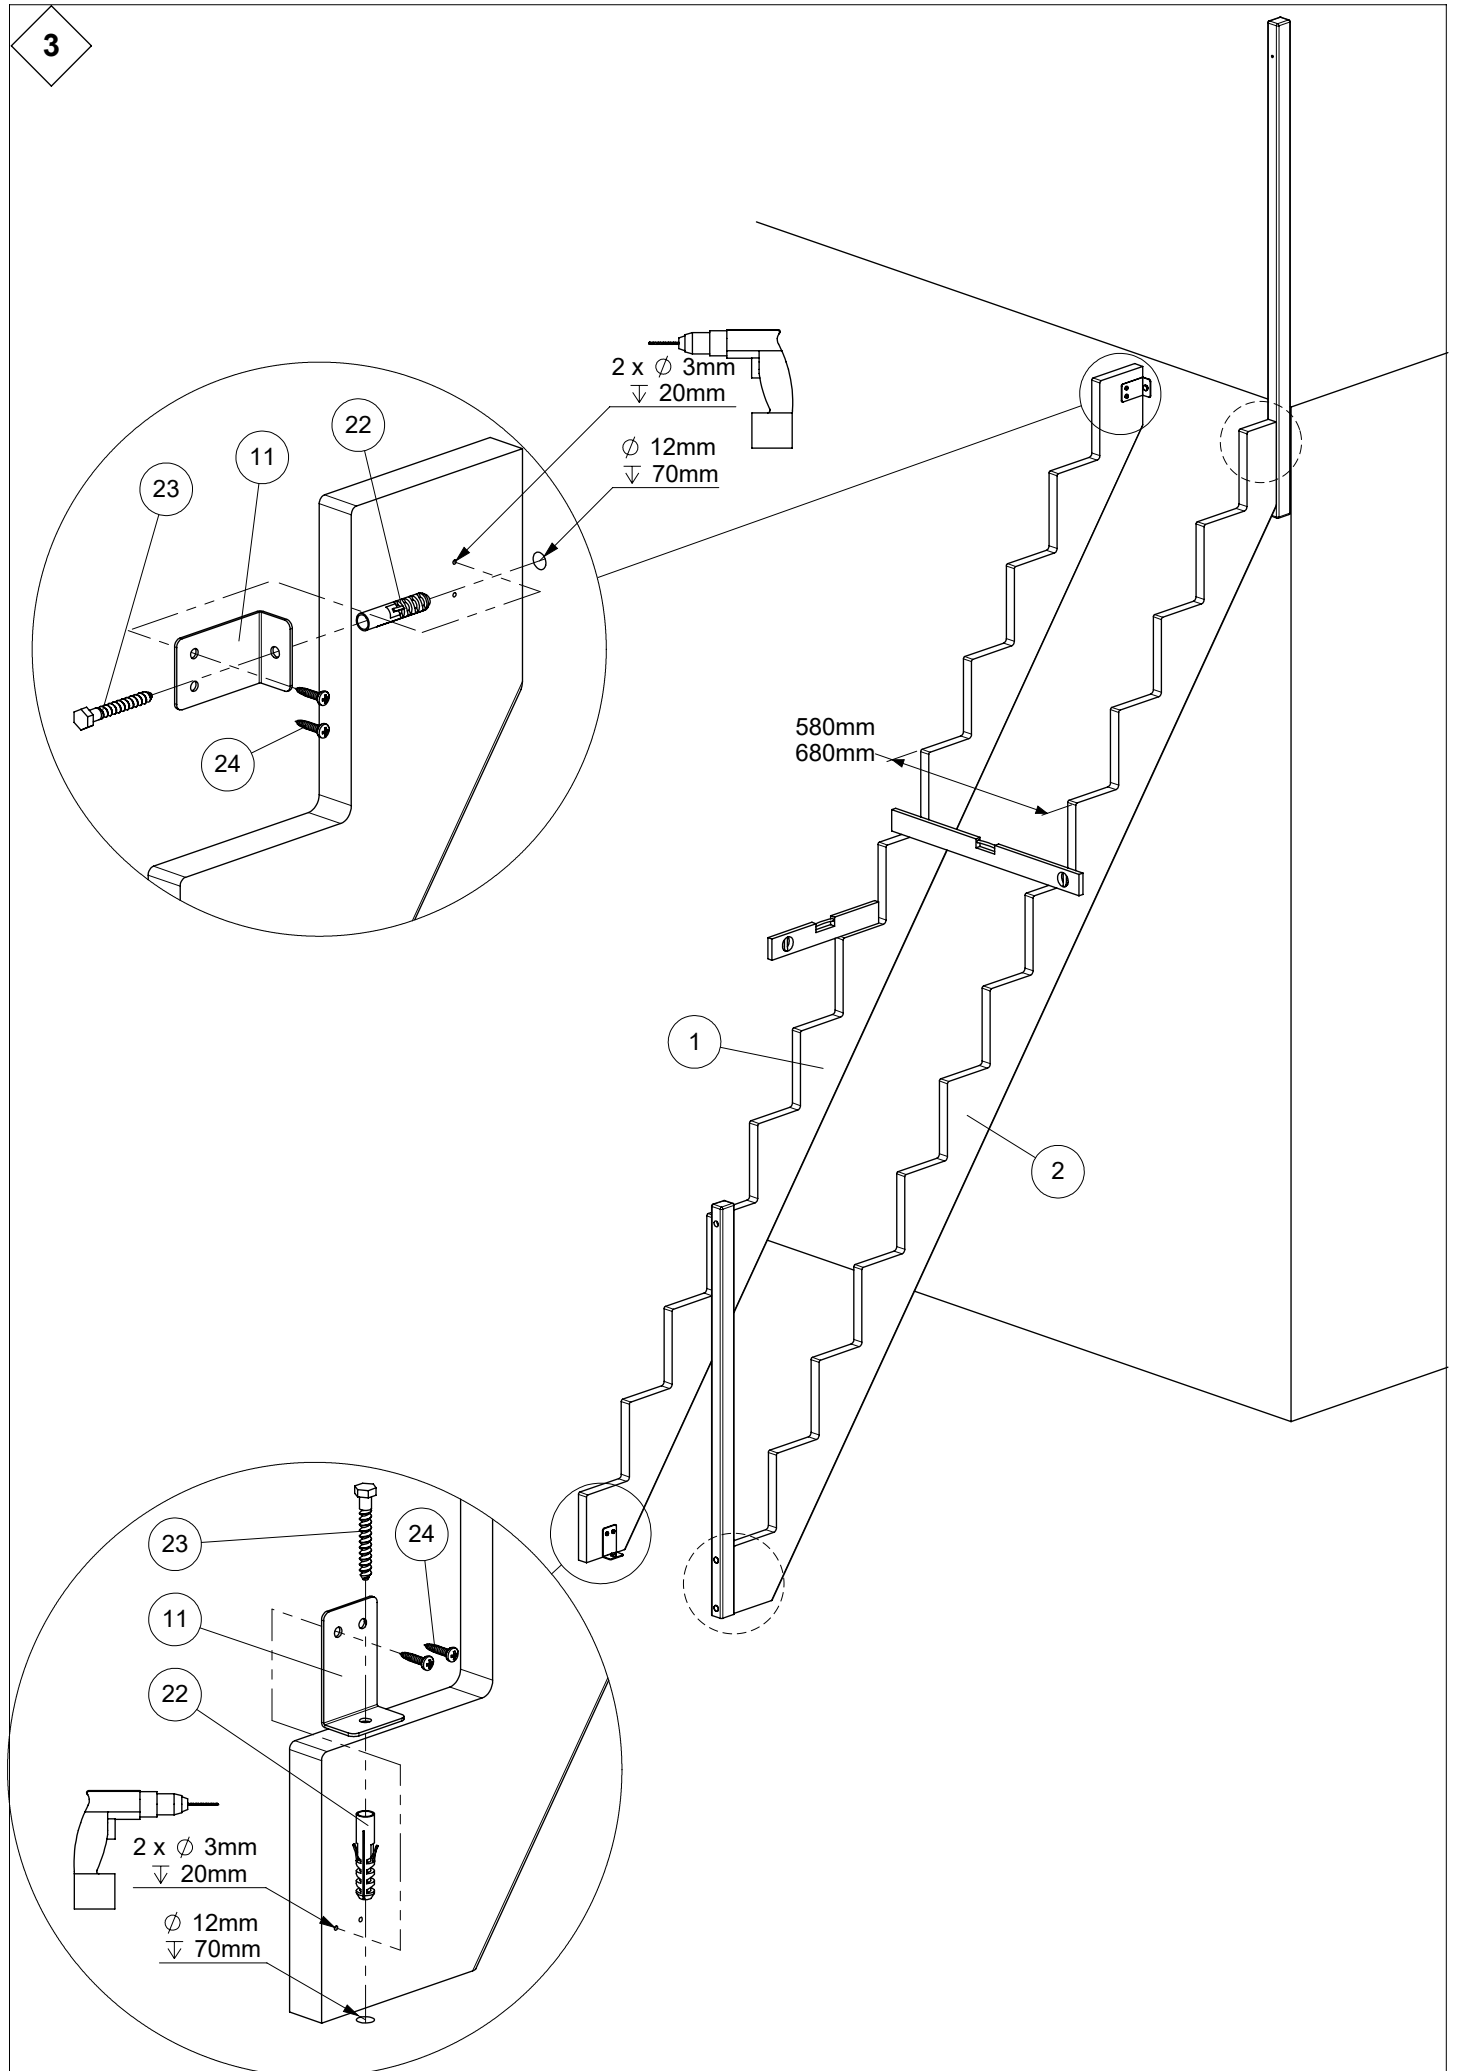

4

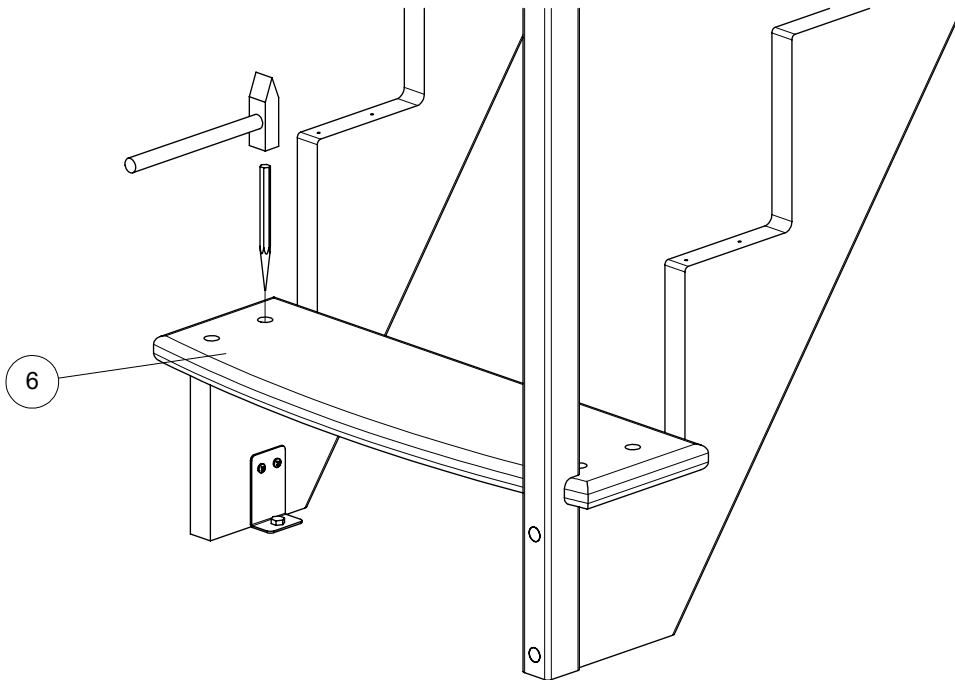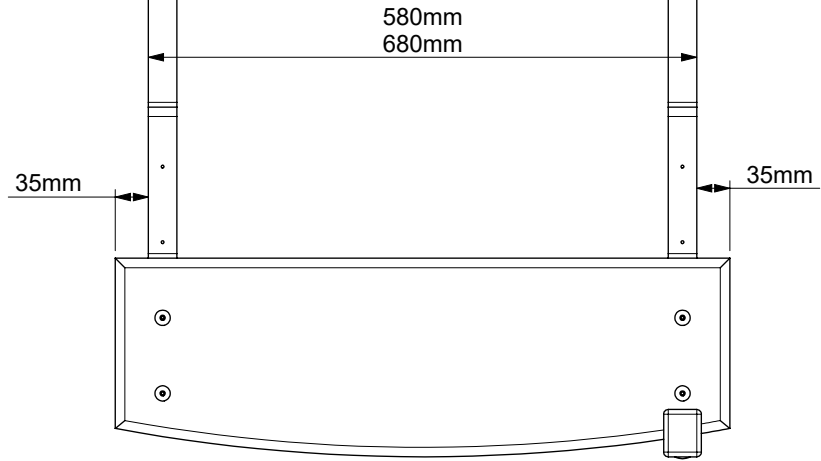

5

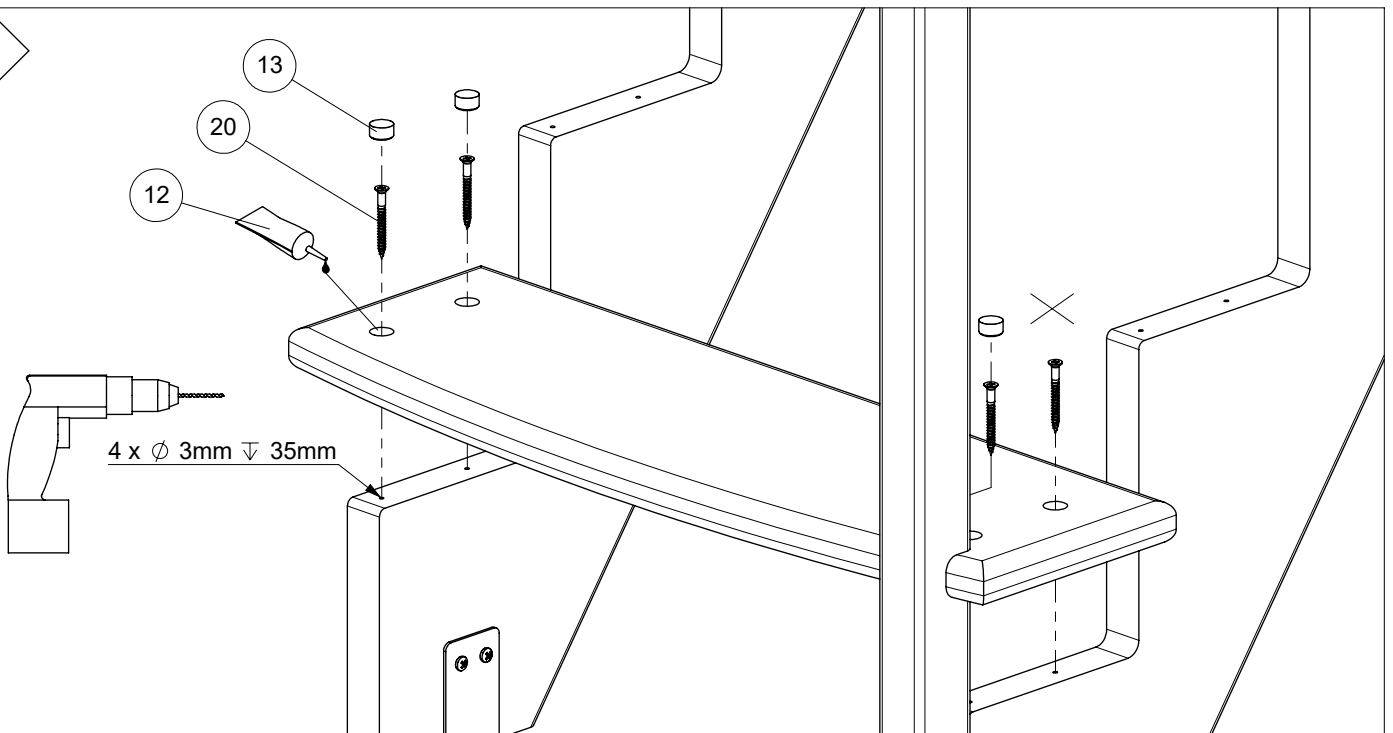

6

